



Original	Replacement	Original	Replacement
	Power		Power
	CBL/SAT		1
	Media Player		2
	Blu-ray		Guide / EPG / -/--
	Game		4
	AUX1		7
	AUX2		Fav / Marker / PC
	TV Audio		5
	CD		3
	Tuner		6
	USB		8
	Phono		0
	Bluetooth		9
	Internet Radio		Smart / List
	Internet Radio		Display / Media
	CH/Page+		CH+ / Page+
	Eco		TV/Radio /

Program

Original	Replacement	Original	Replacement
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Setup		Setup / OPT /
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+





Original	Replacement	Original	Replacement
	Power		Power
	CBL/SAT		1
	Media Player		2
	Blu-ray		Guide / EPG / -/--
	Game		4
	AUX1		7
	AUX2		Fav / Marker / PC
	Tv Audio		5
	CD		3
	Tuner		6
	USB		8
	Phono		0
	Bluetooth		9
	Internet Radio		Smart / List
	Internet Radio		Display / Media
	CH/Page+		CH+ / Page+
	Volume+		Vol+

Original	Replacement	Original	Replacement
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+
	Sleep		Sleep / Timer
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat



