



Original	Replacement	Original	Replacement
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
Power	Power	Power	Power
CBL/SAT	CBL/SAT	HDMI - SAT 0	0
MEDIA PLAYER	Media Player	VIDEO 4	4
Blu-ray	Blu-ray	DVD 2	2
GAME	Game	SHIFT + TV 1	Shift + 1
AUX1	AUX1	AUX - HDD 7	7
AUX2	AUX2	GUIDE EPG	Guide / EPG / -/--
TV AUDIO	TV Audio	TV 1	1
CD	CD	CD - STB 3	3
TUNER	Tuner	TUNER 6	6
USB	USB	USB 8	8
PHONO	Phono	SHIFT + DVD 2	Shift + 2
Bluetooth	Bluetooth	BLUETOOTH 9	9
Heos	Heos	TAPE 5	5
INTERNET RADIO	Internet Radio	PC FAV MARKER	Fav / Marker / PC
CH/Page+	CH/Page+	+ CH PAGE	CH+ / Page+

Original	Replacement	Original	Replacement
ECO	Eco	HOME MENU	Menu / Home
VOLUME +	Volume+	VOL +	Vol+
CH/PAGE -	CH/Page-	CH PAGE -	CH- / Page-
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
VOLUME -	Volume-	VOL -	Vol-
INFO	Info	ANGLE INFO	Info / Angle
OPTION	Option	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
Up	Up	Up	Up
Left	Left	Left	Left
ENTER	Enter	OK	OK
Right	Right	Right	Right
Down	Down	Down	Down
BACK	Back	RETURN BACK	Back / Return
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
TUNE - I<<	Tune- / I<<	PRESET- I<<	I<< / Preset-
TUNE - I<<	Tune- / I<<	TUNE- <<	<< / Tune-
Play / Pause	Play / Pause	SLOW Play	Play / Slow







Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	Media Player		4
	Blu-ray		2
	Game		Shift + 1
	AUX1		7
	AUX2		Guide / EPG / -/--
	TV Audio		1
	CD		3
	Tuner		6
	USB		8
	Phono		Shift + 2
	Bluetooth		9
	Heos		5
	Internet Radio		Fav / Marker / PC
	CH/Page+		CH+ / Page+

Original	Replacement	Original	Replacement
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Tune- / I<<<		<<< / Tune-
	Tune- / I<<<		I<<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Tune+ / >>>I		>>> / Tune+
	Tune+ / >>>I		>>>I / Preset+
	Smart Select 1		Red / Netflix / Search



