
 
 






 











Original		Replacement	
	Standby / On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	Volume-		Vol-
	Volume+		Vol+
	Mute		Mute / Dimmer
	DVD Set Up		Setup / OPT /
	Up		Up

Original		Replacement	
	Top Menu		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Menu		Menu / Home
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	<I		<< / Tune-
	I>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	S Title		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle





Original	Replacement	Original	Replacement
On/Off		Power	
Audio Off		Mute / Dimmer	
Prev.		I<< / Preset-	
Next		>>I / Preset+	
Title		Sound / Title	
Lang		Audio / Lang I/II	
Subt.		Subtitle / EQ	
Zoom		Zoom / Size	
Progr.		TV/Radio /	
Top Menu		D.Menu / Top	
C/CH		Text / Goto	
DVD/TV		AV / Input / RDS	
Menu		Menu / Home	
Menu Up		Up	
Menu Left		Left	
OK Enter		OK	
Menu Right		Right	

Original	Replacement	Original	Replacement
Menu Down		Down	
Return		Back / Return	
Volume+		Vol+	
Auto/Track		Smart / List	
Volume-		Vol-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
+10		Guide / EPG / -/--	
0		0	
Rep/A-B		Yellow / YouTube / Repeat	

