














 





 







 








 















 
 

 
 










 

Original	Replacement
Power On	Power
Power Off	Shift + Power
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Input Up	Ch +
Input Down	Ch -
Phono	Shift + 1
CD	Shift + 2
AMP	Shift + 3
Tuner	Shift + 4
AUX	Shift + 5
DVD	Shift + 6
CD-R	Shift + 7
Tape	Shift + 8
MD	Shift + 9
Source Direct	AV

Original	Replacement
Play CD	Play
Stop CD	Stop
Pause CD	Pause
>> CD	>>
<< CD	<<
Source Power	Smart
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
0 CD	0
Clear CD	Exit





 

 



 

 




 

 

 


 

 

 

 
 





 
 






 
 
 

 
 
 
 


 
 

 


 
 
 




 

Original	Replacement
 Source Power	 Power
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Play DVD	 Play
 Pause DVD	 Pause
 Stop DVD	 Stop
 >>I DVD	 >>I
 I<< DVD	 I<<
 Up DVD	 Up
 Enter DVD	 Ok
 Down DVD	 Down
 Right DVD	 Right
 Left DVD	 Left
 Menu DVD	 Menu
 1 DVD	 1
 2 DVD	 2

Original	Replacement
 3 DVD	 3
 4 DVD	 4
 5 DVD	 5
 6 DVD	 6
 7 DVD	 7
 8 DVD	 8
 9 DVD	 9
 0 DVD	 0
 Clear DVD	 Exit
 Memo DVD	 Pre Ch
 Display DVD	 Info
 Source Power	 Shift + Power
 Up AUX	 Shift + Up
 Down AUX	 Shift + Down
 Right AUX	 Shift + Right
 Left AUX	 Shift + Left
 Enter AUX	 Shift + Ok





Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source Power	 Shift + Power
 Source Power	 Power
 Play MD	 Play
 Stop MD	 Stop
 Pause MD	 Pause
 >>I MD	 >>I
 I<< MD	 I<<
 1 MD	 1
 2 MD	 2
 3 MD	 3
 4 MD	 4
 5 MD	 5
 6 MD	 6
 7 MD	 7

Original	Replacement
 8 MD	 8
 9 MD	 9
 0 MD	 0
 Clear MD	 Exit
 Memo MD	 Pre Ch
 Display MD	 Info
 Up/Tune+	 Up
 Right/Preset+	 Right
 Down/Tune-	 Down
 Left/Preset- Tuner	 Left
 Enter Tuner	 Ok
 P.Scan/A.Tune	 D. Menu
 Menu Tuner	 Menu
 CAT Tuner	 Text
 1 Tuner	 Shift + 1
 2 Tuner	 Shift + 2
 3 Tuner	 Shift + 3





Original	Replacement
Source Power	Power
Play CD-R	Play
Pause CD-R	Pause
Stop CD-R	Stop
>>I CD-R	>>I
I<< CD-R	I<<
Vol+	Vol +
Vol-	Vol -
Mute	Mute
1 CD-R	1
2 CD-R	2
3 CD-R	3
4 CD-R	4
5 CD-R	5
6 CD-R	6
7 CD-R	7
8 CD-R	8

Original	Replacement
9 CD-R	9
0 CD-R	0
Clear CD-R	Exit
Memo CD-R	Pre Ch
Display CD-R	Info
T.Mode CD-R	Format
Source Power	Shift + Power
Play Tape	Shift + Play
Pause Tape	Shift + Pause
Stop Tape	Shift + Stop
>>I Tape	Shift + >>I
I<< Tape	Shift + I<<
1 Tape	Shift + 1
2 Tape	Shift + 2
3 Tape	Shift + 3
4 Tape	Shift + 4
5 Tape	Shift + 5



