



Original	Replacement
	Source Direct
	Power Off
	Power On
	Source Power
	Source Power
	Source Power
	Phono
	CD
	AMP
	Tuner
	AUX
	DVD
	CD- R
	Tape
	MD
	I << CD
	>> CD
	AV / Input / RDS
	Shift + Power
	Power
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Red / Netflix / Search
	Shift + 9
	Shift + 3
	Shift + 1
	Shift + 6
	Shift + 7
	Shift + 2
	Shift + 8
	Shift + 5
	Shift + 4
	I << / Preset-
	>> / Preset+

Original	Replacement
	Stop CD
	Play CD
	Pause CD
	Input Up
	Mute
	Vol +
	Input Down
	Vol -
	1 CD
	2 CD
	3 CD
	4 CD
	5 CD
	6 CD
	7 CD
	8 CD
	9 CD
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	CH+ / Page+
	Mute / Dimmer
	Vol +
	CH- / Page-
	Vol -
	1
	2
	3
	4
	5
	6
	7
	8
	9



[illegible]



 
 
 
 
 
 
 
 
Original	Replacement
Source Power	Power
Source Power	Shift + Power
I << DVD	I << / Preset-
I << AUX	Shift + I << / Preset-
>> I DVD	>> I / Preset+
>> I AUX	Shift + >> I / Preset+
Stop DVD	Stop / Hold
Stop AUX	Shift + Stop /
Play DVD	Play / Slow
Play AUX	Shift + Play /
Pause DVD	Pause / Step / Freeze
Pause AUX	Shift + Pause / Step /
Mute	Mute / Dimmer
Vol +	Vol +
Vol -	Vol -
P. Scan/ A. Tune	Shift + Smart / List
Up DVD	Up

 
 
 
 
 
 
 
Original	Replacement
Up AUX	Shift + Up
Menu DVD	Menu / Home
Menu AUX	Shift + Menu /
Left DVD	Left
Left AUX	Shift + Left
Enter DVD	OK
Enter AUX	Shift + OK
Right DVD	Right
Right AUX	Shift + Right
Down DVD	Down
Down AUX	Shift + Down
1 DVD	1
1 AUX	Shift + 1
2 DVD	2
2 AUX	Shift + 2
3 DVD	3
3 AUX	Shift + 3







Original	Replacement
 Source Power	 Power
 Source Power	 Shift + Power
 I << MD	 Shift + I << / Preset-
 >> MD	 Shift + >> / Preset+
 Stop MD	 Shift + Stop /
 Play MD	 Shift + Play /
 Pause MD	 Shift + Pause / Step /
 Mute	 Mute / Dimmer
 Vol +	 Vol +
 Vol -	 Vol -
 P. Scan / A. Tune	 Smart / List
 Up / Tune+	 Up
 Menu Tuner	 Menu / Home
 Left / Preset- Tuner	 Left
 Enter Tuner	 OK
 Right / Preset+	 Right
 CAT Tuner	 Red / Netflix / Search

Original	Replacement
 Down / Tune-	 Down
 Band Tuner	 TV / Radio /
 1 MD	 Shift + 1
 1 Tuner	 1
 2 MD	 Shift + 2
 2 Tuner	 2
 3 MD	 Shift + 3
 3 Tuner	 3
 4 MD	 Shift + 4
 4 Tuner	 4
 5 MD	 Shift + 5
 5 Tuner	 5
 6 MD	 Shift + 6
 6 Tuner	 6
 7 MD	 Shift + 7
 7 Tuner	 7
 8 MD	 Shift + 8





Original	Replacement	Original	Replacement
 8 Tuner	 8		
 9 MD	 +  Shift + 9		
 9 Tuner	 9		
 Clear MD	 +  Shift + Exit / Cancel / Clear		
 Clear Tuner	 Exit / Cancel / Clear		
 0 MD	 +  Shift + 0		
 0 Tuner	 0		
 Memo MD	 +  Shift + Fav / Marker / PC		
 Memo Tuner	 Fav / Marker / PC		
 Display MD	 +  Shift + Display / Media		
 Display Tuner	 Display / Media		
 PTY Tuner	 Green / APP / Repeat		
 F. Direct Tuner	 Yellow / YouTube / Repeat		
 T. Mode	 Set up / OPT /		





Original	Replacement
 Source Power	 Power
 I << CD- R	 I << / Preset -
 >>I CD- R	 >>I / Preset +
 Stop CD- R	 Stop / Hold
 Play CD- R	 Play / Slow
 Pause CD- R	 Pause / Step / Freeze
 Mute	 Mute / Dimmer
 Vol +	 Vol +
 Vol -	 Vol -
 1 CD- R	 1
 2 CD- R	 2
 3 CD- R	 3
 4 CD- R	 4
 5 CD- R	 5
 6 CD- R	 6
 7 CD- R	 7
 8 CD- R	 8

Original	Replacement
 9 CD- R	 9
 Clear CD- R	 Exit / Cancel / Clear
 0 CD- R	 0
 Memo CD- R	 Fav / Marker / PC
 Display CD- R	 Display / Media
 T. Mode CD- R	 Set up / OPT /
 Source Power	 Shift + Power
 I << Tape	 Shift + I << / Preset -
 >>I Tape	 Shift + >>I / Preset +
 Stop Tape	 Shift + Stop /
 Play Tape	 Shift + Play /
 Pause Tape	 Shift + Pause / Step /
 1 Tape	 Shift + 1
 2 Tape	 Shift + 2
 3 Tape	 Shift + 3
 4 Tape	 Shift + 4
 5 Tape	 Shift + 5



