



Original	Replacement
Open/Close	Eject / Surround
Sound Mode	Sound / Title
Power	Power
AMS	Info / Angle
A-B	Yellow / YouTube / Repeat
Random	Blue / Prime Video / Random
Program	TV/Radio /
Cancel	Exit / Cancel / Clear
Scroll/Recall	Back / Return
Display	Display / Media
Text	Text / Goto
Time	Sleep / Timer
Pitch Control-	Left
Reset	OK
Pitch Control+	Right
Input+	CH+ / Page+
Vol+	Vol+

Original	Replacement
Input-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Repeat	Green / APP / Repeat
Q.Replay	Picture / Format
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
1	1
2	2
3	3
4	4
5	5





Original		Replacement	
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Enter		Smart / List

Original		Replacement	

