



Original	Replacement	Original	Replacement
	Open/Close		Eject / Surround
	Power		Power
	Mode HDMI		Vol+
	Resolution		Vol-
	Pure Direct		AV / Input / RDS
	Display		Display / Media
	Dimmer		Mute / Dimmer
	Mode		Smart / List
	Repeat		Shift + Green / APP / REPEAT
	Repeat A-B		Shift + Yellow / YouTube / REPEAT A-B
	Random		Shift + Blue / Prime Video / RANDOM
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Top Menu		D.Menu / Top
	Clear		Exit / Cancel / Clear
	PopUp		Menu / Home

Menu/Menu

Original	Replacement	Original	Replacement
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Setup		Setup / OPT /
	Pict.Adjust		Picture / Format
	Return		Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		Pause / Step / Freeze
	>>I		>>I / Preset+
	Search		Shift + Red / Netflix / SEARCH
	Stop		Stop / Hold
	Prog/Direct		TV/Radio /

Program





Original	Replacement
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat
	CH+ / Page+
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement
	Sound / Title

