



Original	Replacement	Original	Replacement
AUTO	Aut o	Left	Left
Power Off	Shi ft + Power	Right	Right
Power On	Power	Bass +	Shi ft + Vol +
Dol by	Sound / Title	OK	OK
Power On/Off	AV / Input / RDS	Bass -	Shi ft + Vol -
EX/ES	Ej ect / Surround	CH-	CH / Page-
DTS	Set up / OPT /	Vol -	Vol -
Di rect	Smart / Li st	Treb +	Shi ft + CH+ /
MCH- ST	Shi ft + D. Menu / Top Menu	Down	Down
Stereo	Shi ft + Audi o / Lang 1/11	Treb-	Shi ft + CH /
Vi rt ua	Shi ft + Di spl ay / Medi a	Mute	Mute / Di mmer
CS- II	Shi ft + Sound / Title	Gui de / LI P. Sync	Gui de / EPG / - / -
HT- EQ	D. Menu / Top	Menu	Menu / Home
CH+	CH+ / Page+	Exi t	Exi t / Cancel / Clear
Up	Up	1/ Test	1
Vol +	Vol +	2/ CH. Sel	2
Ni ght	Sl eep / Ti ner	3/ Sur r	3





Original	Replacement
Multi	Display / Media
M-SPKR	Blue / Prime Video / Random
4/ 7.1 CH	4
5/ ATT	5
6/ SPK- AB	6
A/ D	Shift + Yel low / YouTube /
V- Of f	Shift + Mute / Di mmer
7/ Di sp	7
8/ OSD	8
9/ Sl eep	9
Audi o	Audi o / Lang I/I
Cl ear	Shift + Exit / Cancel / Cl ear
0/ THX	0
Memo	Shift + Smart / Li st
I << DVD	I << / Preset -
Pl ay DVD	Pl ay / Sl ow
>> DVD	>> / Preset +

Original	Replacement
St op DVD	St op / Hol d
Pause DVD	Pause / Step / Freeze
TV	Shi ft + 1
DVD	Shi ft + 2
VCR	Shi ft + 4
DSS	Pi ct ure / For nat
Tuner	Shi ft + 6
CD	Shi ft + 3
CD- R	TV/ Radi o /
MD	Yel low / YouTube / Repeat
Tape	Shi ft + 5
AUX 1	Red / Netfl ix / Search
AUX 2	Green / APP / Repeat





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol +
 Volume-	 Vol -
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Memo	 Smart / List
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 I <<	 I << / Preset-
 >> I	 >> I / Preset+
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CL	 Exit / Cancel / Clear
 0	 0
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Set up	 Set up / OPT /
 Display	 Display / Media
 <<	 << / Tune-
 >>	 >> / Tune+
 Repeat	 Green / APP / Repeat



[illegible]



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol +
 Volume-	 Vol -
 Tune+	 >> / Tune+
 Preset -	 I << / Preset -
 Enter	 OK
 Preset +	 >> / Preset +
 Menu	 Menu / Home
 Tune-	 << / Tune-
 Memo	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 CL	 Exit / Cancel / Clear
 0	 0
 CAT-	 CH- / Page-
 CAT+	 CH+ / Page+
 Display	 Display / Media
 Info	 Info / Angle
 T. Mode	 Text / Goto
 P. Scan	 D. Menu / Top
 Band	 Set up / OPT /

