



| Original     | Replacement               |
|--------------|---------------------------|
| Auto         | Text / Goto               |
| Power Off    | Shift + Power             |
| Power On     | Power                     |
| Dolby        | Sound / Title             |
| Power On/Off | AV / Input / RDS          |
| EX/ES        | Eject / Surround          |
| DTS          | Setup / OPT /             |
| Direct       | Smart / List              |
| MCH-ST       | Shift + D.Menu / Top Menu |
| Stereo       | Shift + Audio / Lang I/II |
| Virtua       | Shift + Display / Media   |
| CS-II        | Shift + Sound / Title     |
| HT-EQ        | D.Menu / Top              |
| CH+          | CH+ / Page+               |
| Up           | Up                        |
| Vol+         | Vol+                      |
| Night        | Sleep / Timer             |

| Original       | Replacement           |
|----------------|-----------------------|
| Left           | Left                  |
| Right          | Right                 |
| Bass+          | Shift + Vol+          |
| OK             | OK                    |
| Bass-          | Shift + Vol-          |
| CH-            | CH- / Page-           |
| Vol-           | Vol-                  |
| Treb+          | Shift + CH+ /         |
| Down           | Down                  |
| Treb-          | Shift + CH- /         |
| Mute           | Mute / Dimmer         |
| Guide/LIP.Sync | Guide / EPG / -/--    |
| Menu           | Menu / Home           |
| Exit           | Exit / Cancel / Clear |
| 1/Test         | 1                     |
| 2/CH.Sel       | 2                     |
| 3/Surr         | 3                     |





| Original | Replacement                   |
|----------|-------------------------------|
| Multi    | Display / Media               |
| M-SPKR   | Blue / Prime Video / Random   |
| 4/7.1 CH | 4                             |
| 5/ATT    | 5                             |
| 6/SPK-AB | 6                             |
| A/D      | Shift + Yellow / YouTube /    |
| V-Off    | Shift + Mute / Dimmer         |
| 7/Disp   | 7                             |
| 8/OSD    | 8                             |
| 9/Sleep  | 9                             |
| Audio    | Audio / Lang I/II             |
| Clear    | Shift + Exit / Cancel / Clear |
| 0/THX    | 0                             |
| Memo     | Shift + Smart / List          |
| I<< DVD  | I<< / Preset-                 |
| Play DVD | Play / Slow                   |
| >>I DVD  | >>I / Preset+                 |

| Original  | Replacement               |
|-----------|---------------------------|
| Stop DVD  | Stop / Hold               |
| Pause DVD | Pause / Step / Freeze     |
| TV        | Shift + 1                 |
| DVD       | Shift + 2                 |
| VCR       | Shift + 4                 |
| DSS       | Picture / Format          |
| Tuner     | Shift + 6                 |
| CD        | Shift + 3                 |
| CD-R      | TV/Radio /                |
| MD        | Yellow / YouTube / Repeat |
| Tape      | Shift + 5                 |
| AUX 1     | Red / Netflix / Search    |
| AUX 2     | Green / APP / Repeat      |
|           |                           |
|           |                           |
|           |                           |
|           |                           |





| Original | Replacement           |
|----------|-----------------------|
|          | Power                 |
|          | Mute / Dimmer         |
|          | Vol+                  |
|          | Vol-                  |
|          | Up                    |
|          | Left                  |
|          | OK                    |
|          | Right                 |
|          | Menu / Home           |
|          | Down                  |
|          | Smart / List          |
|          | Pause / Step / Freeze |
|          | Play / Slow           |
|          | Stop / Hold           |
|          | I<< / Preset-         |
|          | I>> / Preset+         |
|          | 1                     |

| Original | Replacement           |
|----------|-----------------------|
|          | 2                     |
|          | 3                     |
|          | 4                     |
|          | 5                     |
|          | 6                     |
|          | 7                     |
|          | 8                     |
|          | 9                     |
|          | Exit / Cancel / Clear |
|          | 0                     |
|          | CH- / Page-           |
|          | CH+ / Page+           |
|          | Setup / OPT /         |
|          | Display / Media       |
|          | << / Tune-            |
|          | >> / Tune+            |
|          | Green / APP / Repeat  |



[illegible]



| Original                                                                                  | Replacement                                                                                     |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|  Power   |  Power         |
|  Mute    |  Mute / Dimmer |
|  Volume+ |  Vol+          |
|  Volume- |  Vol-          |
|  Tune+   |  >> / Tune+    |
|  Preset- |  I<< / Preset- |
|  Enter   |  OK            |
|  Preset+ |  >>I / Preset+ |
|  Menu    |  Menu / Home   |
|  Tune-   |  << / Tune-    |
|  Memo   |  Smart / List |
|  1     |  1           |
|  2     |  2           |
|  3     |  3           |
|  4     |  4           |
|  5     |  5           |
|  6     |  6           |

| Original                                                                                    | Replacement                                                                                               |
|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  7       |  7                     |
|  8       |  8                     |
|  9       |  9                     |
|  CL      |  Exit / Cancel / Clear |
|  0       |  0                     |
|  CAT-    |  CH- / Page-           |
|  CAT+    |  CH+ / Page+           |
|  Display |  Display / Media       |
|  Info    |  Info / Angle          |
|  T.Mode  |  Text / Goto           |
|  P.Scan |  D.Menu / Top         |
|  Band  |  Setup / OPT /       |
|                                                                                             |                                                                                                           |
|                                                                                             |                                                                                                           |
|                                                                                             |                                                                                                           |
|                                                                                             |                                                                                                           |
|                                                                                             |                                                                                                           |
|                                                                                             |                                                                                                           |

