



Original	Replacement
Auto	Text / Goto
Power Off	Shift + Power
Power On	Power
Dolby	Sound / Title
Power On/Off	AV / Input / RDS
EX/ES	Eject / Surround
DTS	Setup / OPT /
Direct	Smart / List
MCH-ST	Shift + D.Menu / Top Menu
Stereo	Shift + Audio / Lang I/II
Virtua	Shift + Display / Media
CS-II	Shift + Sound / Title
HT-EQ	D.Menu / Top
CH+	CH+ / Page+
Up	Up
Vol+	Vol+
Night	Sleep / Timer

Original	Replacement
Left	Left
Right	Right
Bass+	Shift + Vol+
OK	OK
Bass-	Shift + Vol-
CH-	CH- / Page-
Vol-	Vol-
Treb+	Shift + CH+ /
Down	Down
Treb-	Shift + CH- /
Guide/LIP.Sync	Guide / EPG / -/-
Mute	Mute / Dimmer
Menu	Menu / Home
Exit	Exit / Cancel / Clear
1/Test	1
2/CH.Sel	2
3/Surr	3





	Original	Replacement
	Multi	Display / Media
	M-SPKR	Blue / Prime Video / Random
	4/7.1 CH	4
	5/ATT	5
	6/SPK-AB	6
	A/D	Shift + Yellow / YouTube /
	V-Off	Shift + Mute / Dimmer
	7/Disp	7
	8/OSD	8
	9/Sleep	9
	Audio	Audio / Lang I/II
	Clear	Shift + Exit / Cancel / Clear
	0/THX	0
	Memo	Shift + Smart / List
	I<< DVD	I<< / Preset-
	Play DVD	Play / Slow
	>>I DVD	>>I / Preset+

	Original	Replacement
	Stop DVD	Stop / Hold
	Pause DVD	Pause / Step / Freeze
	TV	Shift + 1
	DVD	Shift + 2
	VCR	Shift + 4
	DSS	Picture / Format
	Tuner	Shift + 6
	CD	Shift + 3
	CD-R	TV/Radio /
	MD	Yellow / YouTube / Repeat
	Tape	Shift + 5
	AUX 1	Red / Netflix / Search
	AUX 2	Green / APP / Repeat

