





 

 







 





 








 






Original	Replacement
 Tuner	 Shift + 6
 Tape	 Shift + 5
 TV	 Shift + 1
 V-CD / LD	 Shift + 2
 CD	 Shift + 3
 DCC	 Shift + 8
 VCR1	 Shift + 4
 VCR 2	 Shift + 7
 1	 1
 2	 2
 3	 3
 Standby	 Power
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

 
Original	Replacement
 9	 9
 Mono/ST	 Menu / Home
 0	 0
 Volume-	 Vol-
 Volume+	 Vol+
 Mute	 Mute / Dimmer
 FR.Direct	 D.Menu / Top
 Preset-	 I<< / Preset-
 Preset+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Tuning-	 << / Tune-
 Tuning+	 >> / Tune+
 Vol TV-	 Shift + Vol-
 Vol TV+	 Shift + Vol+
 Center Mode	 OK
 Center Up	 Up







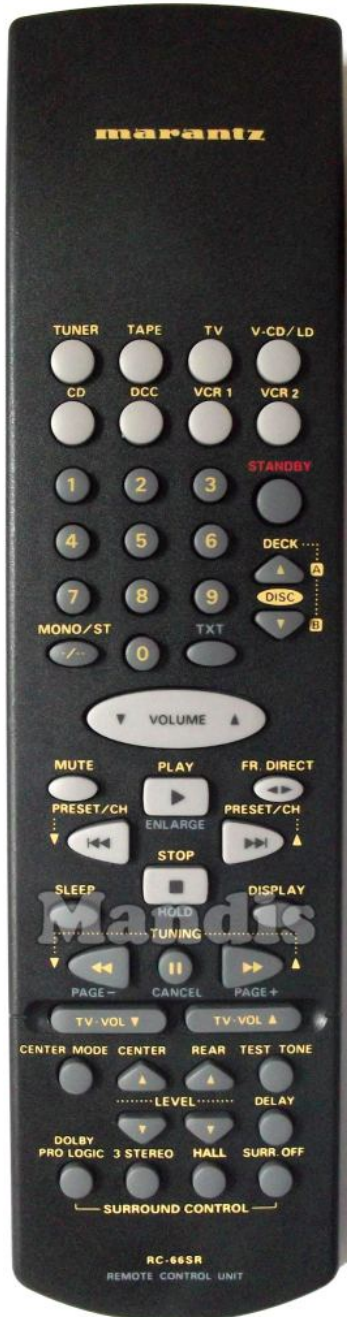 



 







 



 







 







 







 



 



 



 













Original	Replacement	Original	Replacement
Tuner	Shift + 6	8	8
Tape	Shift + 5	9	9
TV	Shift + 1	Disc Down	CH- / Page-
V-CD / LD	Shift + 2	0	0
CD	Shift + 3	Volume-	Vol-
DCC	Shift + 8	Volume+	Vol+
VCR 1	Shift + 4	Mute	Mute / Dimmer
VCR 2	Shift + 7	Play	Play / Slow
1	1	I<	I<< / Preset-
2	2	>I	>>I / Preset+
3	3	Sleep	Sleep / Timer
Standby	Power	Stop	Stop / Hold
4	4	Display	Display / Media
5	5	<<	<< / Tune-
6	6	Pause	Pause / Step / Freeze
Disc Up	CH+ / Page+	>>	>> / Tune+
7	7	Center Mode	OK





Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		8		8
	Tape		Shift + 5		9		9
	TV		Shift + 1		Disc Down		CH- / Page-
	V-CD		Shift + 2		0		0
	CD		Shift + 3		Volume-		Vol-
	DCC		Shift + 8		Volume+		Vol+
	VCR 1		Shift + 4		Mute		Mute / Dimmer
	VCR 2		Shift + 7		Play		Play / Slow
	1		1		I<		I<< / Preset-
	2		2		>I		>>I / Preset+
	3		3		Sleep		Sleep / Timer
	Standby		Power		Stop		Stop / Hold
	4		4		Display		Display / Media
	5		5		<<		<< / Tune-
	6		6		Pause		Pause / Step / Freeze
	Disc Up		CH+ / Page+		>>		>> / Tune+
	7		7		Center Mode		OK





Original	Replacement
Tuner	Shift + 6
Tape	Shift + 5
TV	Shift + 1
V-CD	Shift + 2
CD	Shift + 3
DCC	Shift + 8
VCR1	Shift + 4
VCR 2	Shift + 7
1	1
2	2
3	3
Standby	Power
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
-/--	Guide / EPG / -/--
0	0
TXT	Text / Goto
Rcvr Volume-	Shift + Vol-
Rcvr Volume+	Shift + Vol+
Rcvr Mute	Shift + Mute / Dimmer
TV Mute	Mute / Dimmer
Enlarge	Zoom / Size
CH Down	CH- / Page-
CH Up	CH+ / Page+
Sleep	Sleep / Timer
Hold	Stop / Hold
Display	Display / Media
Page-	Shift + CH- /
Cancel	Exit / Cancel / Clear
Page+	Shift + CH+ / Page+

Page+



