





































Original	Replacement	Original	Replacement
Main Power On	Power	6	6
Main Power Off	Shift + Power	B -/--	Green / APP / Repeat
Source Power	AV / Input / RDS	7	7
Phono	Shift + 4	8	8
CD	Shift + 3	9	9
Tuner	Shift + 6	Mode	Menu / Home
Recorder 1 / CD-R	Shift + 1	-	Guide / EPG / -/--
AUX	Shift + 7	0	0
DVD	Shift + 2	+	Fav / Marker / PC
Recorder	Shift + 5	Memo	Yellow / YouTube / Repeat
Recorder 2 / MD	Shift + 8	Scroll	Blue / Prime Video / Random
1	1	Cancel	Exit / Cancel / Clear
2	2	Text / Mode 1	Smart / List
3	3	Text / Mode 1	Text / Goto
A F/P	Red / Netflix / Search	Time / Mode 2	Display / Media
4	4	Time / Mode 2	Sleep / Timer
5	5	I<<	I<< / Preset-











































































Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Source Power	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 A F/P	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 B -/--	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 -	 Guide / EPG / -/--
 0	 0
 +	 Fav / Marker / PC

Original	Replacement
 Text / Mode 1	 Smart / List
 Text / Mode 1	 Text / Goto
 Time / Mode 2	 Display / Media
 Time / Mode 2	 Sleep / Timer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Volume+	 Vol+
 Pause	 Pause / Step / Freeze
 Open/Close	 Eject / Surround
 Volume-	 Vol-





Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Source Power	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 A F/P	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 B -/--	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 Mode	 Menu / Home
 -	 Guide / EPG / -/--
 0	 0














 














 





Original	Replacement
 +	 Fav / Marker / PC
 Memo	 Yellow / YouTube / Repeat
 Scroll	 Blue / Prime Video / Random
 Cancel	 Exit / Cancel / Clear
 Text / Mode 1	 Text / Goto
 Text / Mode 1	 Smart / List
 Time / Mode 2	 Sleep / Timer
 Time / Mode 2	 Display / Media
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Volume+	 Vol+
 Pause	 Pause / Step / Freeze



 







































Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Source Power	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 A F/P	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 B -/--	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 Mode	 Menu / Home
 -	 Guide / EPG / -/--
 0	 0

Original	Replacement
 +	 Fav / Marker / PC
 Memo	 Yellow / YouTube / Repeat
 Cancel	 Exit / Cancel / Clear
 Text / Mode 1	 Smart / List
 Text / Mode 1	 Text / Goto
 Time / Mode 2	 Display / Media
 Time / Mode 2	 Sleep / Timer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Volume+	 Vol+
 <>	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze



