



Original	Replacement
Mute	Mute / Dimmer
Power	Power
Phono	Shift + 7
Tuner	Shift + 6
CD	Shift + 3
CDR/Tape	Shift + 5
TV	Shift + 1
VCR	Shift + 4
SAT	Shift + 0
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Replacement
8	8
9	9
Nothing	Guide / EPG / -/-
0	0
Menu	Menu / Home
Up	Up
OK	OK
Left	Left
Right	Right
Vol+	Vol+
Down	Down
Play	Play / Slow
Vol-	Vol-
i/News T/A	Info / Angle
Stop	Stop / Hold
I<<	I<< / Preset-
Channel/Track	>>I / Preset+

>>I







 

 

 

 

 


 




 







Original	Replacement	Original	Replacement
Loudness	Smart / List		
Sound	Sound / Title		
Pause/FR./D.	Pause / Step / Freeze		
Night	Sleep / Timer		
3D Surr.	TV/Radio /		
Surr. On/Off	Display / Media		
Sub Woofer+	CH+ / Page+		
Rear+	Shift + CH+ /		
Surr. Mode	Picture / Format		
Sub Woofer-	CH- / Page-		
Rear-	Shift + CH- /		
Test Tone	Zoom / Size		

Original	Replacement	Original	Replacement



 



















 





 









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Nothing	 Guide / EPG / -/--
 0	 0
 Menu	 Menu / Home
 Up	 Up
 OK	 OK

Original	Replacement
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 Play	 Play / Slow
 Vol-	 Vol-
 i/News T/A	 Info / Angle
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Cancel	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze
 T-C	 TV/Radio /
 Disc	 Blue / Prime Video / Random





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 CD	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Nothing	 Guide / EPG / -/--
 0	 0
 Up	 Up
 Left	 Left
 Right	 Right

Original	Replacement
 Vol+	 Vol+
 Down	 Down
 Play	 Play / Slow
 Vol-	 Vol-
 i/News T/A	 Info / Angle
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 :>/Cancel	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze
 Disc	 Blue / Prime Video / Random

