



 


Original	Replacement
Standby	Shift + Power
On	Power
HDMI	AV / Input / RDS
A/D	Audio / Lang I/II
Test Tone	Text / Goto
SPKR A-B	Setup / OPT /
Z2	Yellow / YouTube / Repeat
Z3	Blue / Prime Video / Random
BD	Green / APP / Repeat
DVD	2
VCR	4
SAT	0
GAME	Fav / Marker / PC
AUX1	7
Network	9
USB	8
TV	1

Original	Replacement
CD	3
CDR	Guide / EPG / -/-
Tune	6
M-XP	5
Input Up	>>I / Preset+
Mute	Mute / Dimmer
Volume+	Vol+
Input Down	I<< / Preset-
Display	Display / Media
Surr	Eject / Surround
Volume-	Vol-
Shift	Back / Return
Up	Up
Info	Info / Angle
Search	Red / Netflix / Search
Left	Left
Enter	OK





Original	Replacement	Original	Replacement
 Right	 Right		
 Menu	 Menu / Home		
 Down	 Down		
 Auto	 Smart / List		
 Stereo	 Sound / Title		
 P.Direct	 Picture / Format		
 MultEQ	 Subtitle / EQ		
 M-DAX	 D.Menu / Top		
 DYN EQ	 Shift + Subtitle / EQ		
 DYN Vol	 Exit / Cancel / Clear		
 Sleep	 Sleep / Timer		
 Channel-	 CH- / Page-		
 Channel+	 CH+ / Page+		

Original	Replacement	Original	Replacement





Original	Replacement

Original	Replacement









 



 

 

 



 





Original	Replacement
	CH- / Page-
	CH+ / Page+

Original	Replacement





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 T.Mode	 Text / Goto
 Display	 Display / Media
 Memory	 Setup / OPT /
 Volume-	 Vol-
 Info	 Info / Angle
 Enter	 OK
 Menu	 Menu / Home
 Band	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 CLR	 Exit / Cancel / Clear
 0	 0
 Tune-	 << / Tune-
 Tune+	 >> / Tune+
 Preset-	 I<< / Preset-
 Preset+	 >>I / Preset+

