



Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	On/Standby		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		4
	Game		Fav / Marker / PC
	AUX		7
	Media Player		Display / Media
	TV Audio		1
	CD		3
	Tuner		6
	iPod/USB		8
	Phono		Guide / EPG / -/--
	M-XPort		5
	Network		9
	Internet Radio		Smart / List
	CH+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Info		Info / Angle
	Option		Shift + Setup / OPT / Tools
	Option		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play / Pause		Play / Slow







Original	Replacement	Original	Replacement
Sleep	Sleep / Timer	Vol+	Vol+
On/Standby	Power	CH-	CH- / Page-
CBL/SAT	0	Mute	Mute / Dimmer
DVD	2	Vol-	Vol-
Blu-ray	4	Option	Setup / OPT /
Game	Fav / Marker / PC	Option	Menu / Home
AUX	7	Up	Up
Media Player	Display / Media	Left	Left
TV Audio	1	Enter	OK
CD	3	Right	Right
Tuner	6	Back	Back / Return
iPod/USB	8	Down	Down
Phono	Guide / EPG / -/--	I<</Tune-	I<< / Preset-
M-XPort	5	I<</Tune-	<< / Tune-
Network	9	Play / Pause	Play / Slow
Internet Radio	Smart / List	Play / Pause	Pause / Step / Freeze
CH+	CH+ / Page+	>>I/Tune+	>>I / Preset+

Original	Replacement	Original	Replacement
Vol+	Vol+	CH-	CH- / Page-
Mute	Mute / Dimmer	Vol-	Vol-
Option	Setup / OPT /	Option	Menu / Home
Up	Up	Left	Left
Enter	OK	Right	Right
Back	Back / Return	Down	Down
I<</Tune-	I<< / Preset-	I<</Tune-	<< / Tune-
Play / Pause	Play / Slow	Play / Pause	Pause / Step / Freeze
Play / Pause	Pause / Step / Freeze	>>I/Tune+	>>I / Preset+



