



Original	Replacement	Original	Replacement
Main Power On	Power	4 Tape	4
Main Power Off	Shift + Power	5 Tape	5
Mute	Mute	6 Tape	6
Volume Up	Vol +	7 Tape	7
Volume Down	Vol -	8 Tape	8
AUX	Red	9 Tape	9
Phono	Green	0 Tape	0
CD	Yellow	+ Tape	Ch +
DVD	Blue	- Tape	Ch -
Tuner	TV/R	Cancel Tape	Exit
Tape	Smart	1 Mode/Text Tape	Format
CD-R	Media	2 Mode/Time	3D
MD	Options	Memo Tape	Rec
Source Power	Ok	B/-/- Tape	Guide
1 Tape	1	A / F/P Tape	Info
2 Tape	2	Play Tape	Play
3 Tape	3	I<< Tape	I<<





 


 
 


 
 



 
 


 
 

 
 
 





 
 


 



 




 



 


 
 





 





 







Original	Replacement
>> Tape	>>
<< Tape	<<
Stop Tape	Stop
>> Tape	>>
Pause Tape	Pause
Open/Close	Eject
<> Tape	Text
Mode Tape	Menu
Source Power	Shift + Ok
1 Tune	Shift + 1
2 Tune	Shift + 2
3 Tune	Shift + 3
4 Tune	Shift + 4
5 Tune	Shift + 5
6 Tune	Shift + 6
7 Tune	Shift + 7
8 Tune	Shift + 8

Original	Replacement
9 Tune	Shift + 9
0 Tune	Shift + 0
+ Tune	Shift + Ch +
- Tune	Shift + Ch -
Scroll Tune	Shift + Back
Cancel Tune	Shift + Exit
1 Mode/Text Tune	Shift + Format
2 Mode/Time	Shift + 3D
I<< Tune	Shift + I<<
>> Tune	Shift + >>
>> Tune	Shift + >>
<< Tune	Shift + <<
A / F/P Tune	Shift + Info
B/-/-- Tune	Shift + Guide
Memo Tune	Shift + Rec
Mode Tune	Shift + Menu












 







 



 

 

 



 



 







 
 













 



 




 




Original	Replacement	Original	Replacement
 Main Power On	 Power	 5 DVD	 5
 Main Power Off	 Shift + Power	 6 DVD	 6
 Mute	 Mute	 7 DVD	 7
 Volume Up	 Vol +	 8 DVD	 8
 Volume Down	 Vol -	 9 DVD	 9
 AUX	 Red	 0 DVD	 0
 DVD	 Blue	 + DVD	 Ch +
 CD	 Yellow	 - DVD	 Ch -
 Phono	 Green	 Play DVD	 Play
 Tuner	 TV/R	 I<< DVD	 I<<
 Tape	 Smart	 >>I DVD	 >>I
 CD-R	 Media	 << DVD	 <<
 MD	 Options	 Stop DVD	 Stop
 1 DVD	 1	 >> DVD	 >>
 2 DVD	 2	 Pause DVD	 Pause
 3 DVD	 3	 Open/Close	 Eject
 4 DVD	 4	 1 Mode/Text	 Format

DVD






 










































 




 


















Original	Replacement	Original	Replacement
 Main Power On	 Power	 4 CD-R	 4
 Main Power Off	 Shift + Power	 5 CD-R	 5
 AUX	 Red	 6 CD-R	 6
 Phono	 Green	 7 CD-R	 7
 CD	 Yellow	 8 CD-R	 8
 DVD	 Blue	 9 CD-R	 9
 Tuner	 TV/R	 0 CD-R	 0
 Tape	 Smart	 + CD-R	 Ch +
 CD-R	 Media	 - CD-R	 Ch -
 MD	 Options	 Scroll CD-R	 Back
 Mute	 Mute	 Cancel CD-R	 Exit
 Volume Up	 Vol +	 1 Mode/Text CD-R	 Format
 Volume Down	 Vol -	 2 Mode/Time	 3D
 Source Power	 Ok	 Play CD-R	 Play
 1 CD-R	 1	 I<< CD-R	 I<<
 2 CD-R	 2	 >>I CD-R	 >>I
 3 CD-R	 3	 Stop CD-R	 Stop




 


 


 
 



 




 


 
 

 
 


 






 






 


 









 







 
 
 
 




Original	Replacement	Original	Replacement
 >> CD-R	 >>	 + MD	 Shift + Ch +
 << CD-R	 <<	 - MD	 Shift + Ch -
 Pause CD-R	 Pause	 Cancel MD	 Shift + Exit
 Open/Close	 Eject	 1 Mode/Text MD	 Shift + Format
 Memo CD-R	 Rec	 2 Mode/Time	 Shift + 3D
 Mode CD-R	 Menu	 Play MD	 Shift + Play
 Source Power	 Shift + Ok	 I<< MD	 Shift + I<<
 1 MD	 Shift + 1	 >>I MD	 Shift + >>I
 2 MD	 Shift + 2	 >> MD	 Shift + >>
 3 MD	 Shift + 3	 << MD	 Shift + <<
 4 MD	 Shift + 4	 Stop MD	 Shift + Stop
 5 MD	 Shift + 5	 Pause MD	 Shift + Pause
 6 MD	 Shift + 6	 Open/Close MD	 Shift + Eject
 7 MD	 Shift + 7	 Memo MD	 Shift + Rec
 8 MD	 Shift + 8	 Mode MD	 Shift + Menu
 9 MD	 Shift + 9	 B/-/ MD	 Shift + Guide
 0 MD	 Shift + 0	 A / F/P MD	 Shift + Info





Original	Replacement	Original	Replacement
 Main Power On	 Power	 4 CD	 4
 Main Power Off	 Shift + Power	 5 CD	 5
 Mute	 Mute	 6 CD	 6
 Volume Up	 Vol +	 7 CD	 7
 Volume Down	 Vol -	 8 CD	 8
 AUX	 Red	 9 CD	 9
 Phono	 Green	 0 CD	 0
 CD	 Yellow	 + CD	 Ch +
 DVD	 Blue	 - CD	 Ch -
 Tuner	 TV/R	 Play CD	 Play
 Tape	 Smart	 I<< CD	 I<<
 CD-R	 Media	 >>I CD	 >>I
 MD	 Options	 << CD	 <<
 Source Power	 Ok	 Stop CD	 Stop
 1 CD	 1	 >> CD	 >>
 2 CD	 2	 Pause CD	 Pause
 3 CD	 3	 Open/Close CD	 Eject





Original	Replacement
Cancel CD	Exit
1 Mode/Text CD	Format
2 Mode/Time	3D
Scroll CD	Back
Memo CD	Rec
Mode CD	Menu
B/-/ CD	Guide
A / F/P CD	Info
Source Power	Shift + Ok
1 AUX	Shift + 1
2 AUX	Shift + 2
3 AUX	Shift + 3
4 AUX	Shift + 4
5 AUX	Shift + 5
6 AUX	Shift + 6
7 AUX	Shift + 7
8 AUX	Shift + 8

Original	Replacement
9 AUX	Shift + 9
0 AUX	Shift + 0
+ AUX	Shift + Ch +
- AUX	Shift + Ch -
Play AUX	Shift + Play
Stop AUX	Shift + Stop
>>I AUX	Shift + >>I
I<< AUX	Shift + I<<
>> AUX	Shift + >>
<< AUX	Shift + <<
Pause AUX	Shift + Pause
Open/Close AUX	Shift + Eject
<> AUX	Shift + Right
<> AUX	Shift + Left
1 Mode/Text	Shift + Format
2 Mode/Time	Shift + 3D
Memo AUX	Shift + Rec



