


 






Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Source Power	 OK
 Power Source	 Shift + OK
 Phono	 Shift + 1
 CD	 Shift + 3
 Tuner	 Shift + 6
 CD-R	 Shift + 8
 AUX	 Shift + 7
 DVD	 Shift + 2
 Tape	 Shift + 5
 MD	 Shift + 4
 1 DVD	 1
 2 DVD	 2
 3 DVD	 3
 A / F/P DVD	 Yellow / YouTube / Repeat
 4 DVD	 4

Original	Replacement
 5 DVD	 5
 6 DVD	 6
 B/-/ DVD	 Blue / Prime Video / Random
 7 DVD	 7
 8 DVD	 8
 9 DVD	 9
 - DVD	 Guide / EPG / -/
 0 DVD	 0
 + DVD	 Fav / Marker / PC
 1 Mode/Text	 Red / Netflix / Search
 2 Mode/Time	 Green / APP / Repeat
 I<< DVD	 I<< / Preset-
 Play DVD	 Play / Slow
 >>I DVD	 >>I / Preset+
 Mute	 Mute / Dimmer
 << DVD	 << / Tune-
 Stop DVD	 Stop / Hold





Original	Replacement
Main Power On	Power
Main Power Off	Shift + Power
Source Power	OK
Phono	Shift + 1
CD	Shift + 3
Tuner	Shift + 6
CD-R	Shift + 8
AUX	Shift + 7
DVD	Shift + 2
Tape	Shift + 5
MD	Shift + 4
1 Tune	1
2 Tune	2
3 Tune	3
A / F/P Tune	Yellow / YouTube / Repeat
4 Tune	4
5 Tune	5

Original	Replacement
6 Tune	6
B/-/ Tune	Blue / Prime Video / Random
7 Tune	7
8 Tune	8
9 Tune	9
Mode Tune	Smart / List
- Tune	Guide / EPG / -/-
0 Tune	0
+ Tune	Fav / Marker / PC
Memo Tune	Display / Media
Scroll Tune	Info / Angle
Cancel Tune	Exit / Cancel / Clear
1 Mode/Text Tune	Red / Netflix / Search
2 Mode/Time	Green / APP / Repeat
I<< Tune	I<< / Preset-
>>I Tune	>>I / Preset+
Mute	Mute / Dimmer





Original	Replacement
<< Tune	<< / Tune-
>> Tune	>> / Tune+
Volume Up	Vol+
Volume Down	Vol-
Source Power	Shift + OK
+ Tape	Shift + Fav / Marker / PC
- Tape	Shift + Guide / EPG / -/--
Cancel Tape	Shift + Exit / Cancel / Clear
1 Mode/Text Tape	Shift + Red / Netflix /
2 Mode/Time	Shift + Green / APP /
Memo Tape	Shift + Display / Media
B/-/-- Tape	Shift + Blue / Prime
A / F/P Tape	Shift + Yellow / YouTube /
Play Tape	Shift + Play /
I<< Tape	Shift + I<< / Preset-
>>I Tape	Shift + >>I / Preset+
<< Tape	Shift + << /











 

















 





Tune-

Original	Replacement
Stop Tape	Shift + Stop /
>> Tape	Shift + >> /
Pause Tape	Shift + Pause / Step /
Open/Close	Shift + Eject / Surround
<> Tape	Play / Slow
Mode Tape	Shift + Smart / List






















 

 
 





Original	Replacement
 Main Power On	 Power
 Main Power Off	 Shift + Power
 Source Power	 OK
 Phono	 Shift + 1
 CD	 Shift + 3
 Tuner	 Shift + 6
 CD-R	 Shift + 8
 AUX	 Shift + 7
 DVD	 Shift + 2
 Tape	 Shift + 5
 MD	 Shift + 4
 1 CD-R	 1
 2 CD-R	 2
 3 CD-R	 3
 4 CD-R	 4
 5 CD-R	 5
 6 CD-R	 6

Original	Replacement
 7 CD-R	 7
 8 CD-R	 8
 9 CD-R	 9
 Mode CD-R	 Smart / List
 - CD-R	 Guide / EPG / -/-
 0 CD-R	 0
 + CD-R	 Fav / Marker / PC
 Memo CD-R	 Display / Media
 Scroll CD-R	 Info / Angle
 Cancel CD-R	 Exit / Cancel / Clear
 1 Mode/Text CD-R	 Red / Netflix / Search
 2 Mode/Time	 Green / APP / Repeat
 I<< CD-R	 I<< / Preset-
 Play CD-R	 Play / Slow
 >>I CD-R	 >>I / Preset+
 Mute	 Mute / Dimmer
 << CD-R	 << / Tune-





Original	Replacement
 Stop CD-R	 Stop / Hold
 >> CD-R	 >> / Tune+
 Volume Up	 Vol+
 Pause CD-R	 Pause / Step / Freeze
 Open/Close	 Eject / Surround
 Volume Down	 Vol-
 Source Power	 Shift + OK
 + MD	 Shift + Fav / Marker / PC
 - MD	 Shift + Guide / EPG / -/--
 Cancel MD	 Shift + Exit / Cancel / Clear
 1 Mode/Text MD	 Shift + Red / Netflix /
 2 Mode/Time	 Shift + Green / APP /
 Play MD	 Shift + Play /
 I<< MD	 Shift + I<< / Preset-
 >>I MD	 Shift + >>I / Preset+
 >> MD	 Shift + >> /
 << MD	 Shift + << /

Tune-

Original	Replacement
 Stop MD	 Shift + Stop /
 Pause MD	 Shift + Pause / Step /
 Open/Close MD	 Shift + Eject / Surround
 Memo MD	 Shift + Display / Media
 Mode MD	 Shift + Smart / List
 B/-/-- MD	 Shift + Blue / Prime
 A / F/P MD	 Shift + Yellow / YouTube /





Original	Replacement	Original	Replacement
Main Power On	Power	6 CD	6
Main Power Off	Shift + Power	B/-/ CD	Blue / Prime Video / Random
Source Power	OK	7 CD	7
Phono	Shift + 1	8 CD	8
CD	Shift + 3	9 CD	9
Tuner	Shift + 6	Mode CD	Smart / List
CD-R	Shift + 8	- CD	Guide / EPG / -/-
AUX	Shift + 7	0 CD	0
DVD	Shift + 2	+ CD	Fav / Marker / PC
Tape	Shift + 5	Memo CD	Display / Media
MD	Shift + 4	Scroll CD	Info / Angle
1 CD	1	Cancel CD	Exit / Cancel / Clear
2 CD	2	1 Mode/Text CD	Red / Netflix / Search
3 CD	3	2 Mode/Time	Green / APP / Repeat
A / F/P CD	Yellow / YouTube / Repeat	I<< CD	I<< / Preset-
4 CD	4	Play CD	Play / Slow
5 CD	5	>>I CD	>>I / Preset+





Original	Replacement
Mute	Mute / Dimmer
<< CD	<< / Tune-
Stop CD	Stop / Hold
>> CD	>> / Tune+
Volume Up	Vol+
Pause CD	Pause / Step / Freeze
Open/Close CD	Eject / Surround
Volume Down	Vol-
Source Power	Shift + OK
+ AUX	Shift + Fav / Marker / PC
- AUX	Shift + Guide / EPG / -/-
Play AUX	Shift + Play /
Stop AUX	Shift + Stop /
>>I AUX	Shift + >>I / Preset+
I<< AUX	Shift + I<< / Preset-
>> AUX	Shift + >> /
<< AUX	Shift + << /

Tune-

Original	Replacement
Pause AUX	Shift + Pause / Step /
Open/Close AUX	Shift + Eject / Surround
<> AUX	Shift + Rec / Rec Mode
1 Mode/Text	Shift + Red / Netflix /
2 Mode/Time	Shift + Green / APP /
Memo AUX	Shift + Display / Media
Mode AUX	Shift + Smart / List
B/-/- AUX	Shift + Blue / Prime
A / F/P AUX	Shift + Yellow / YouTube /

