



Original	Replacement
Dimmer	Mute / Dimmer
Open/Close	Eject / Surround
1	1
2	2
3	3
Edit	Display / Media
4	4
5	5
6	6
Time	Sleep / Timer
7	7
8	8
9	9
Repeat	Green / APP / Repeat
0	0
Cancel	Exit / Cancel / Clear
Prog	TV/Radio /

Program

Original	Replacement
Recall	Back / Return
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
Random	Blue / Prime Video / Random
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
AMS	Smart / List
Stop	Stop / Hold
A-B	Yellow / YouTube / Repeat
Vol-	Vol-
Vol+	Vol+

