



Original	Replacement
On/Standby	Power
AMP	Shift + Power
Dimmer	Shift + Mute / Dimmer
Internet Radio	Shift + 1
Music Server	Shift + 2
Online Music	Shift + 3
iPod/USB	Shift + 7
M-XPort	Shift + 4
Tuner	Shift + 6
USB Digital In	Shift + 8
OPT/Coax Digital	Shift + 5
Favorite	Fav / Marker / PC
I<</CH-	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/CH+	>>I / Preset+
<</Tuning-	<< / Tune-

Original	Replacement
Stop	Stop / Hold
>>/Tuning+	>> / Tune+
Input Up	CH+ / Page+
Mute	Mute / Dimmer
Vol+	Vol+
Input Down	CH- / Page-
M-Dax	Smart / List
Vol-	Vol-
Menu	Menu / Home
Mode	Info / Angle
Up	Up
Left	Left
Enter/Memo	OK
Right	Right
Search	Red / Netflix / Search
Down	Down
Home	D.Menu / Top

Menu





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Dig.Out		Setup / OPT /
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Display		Display / Media

Original	Replacement	Original	Replacement

