 




Original	Replacement	Original	Replacement
	Power AMP		Power
	Menu AMP		Menu / Home
	UP AMP		Up
	Left AMP		Left
	Enter AMP		OK
	Right AMP		Right
	Down AMP		Down
	Info		Info / Angle
	Disc/Input		AV / Input / RDS
	Open/Close		Eject / Surround
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	Program		TV/Radio /
	Repeat		Green / APP / Repeat
	Input Up		CH+ / Page+
	Tone		Audio / Lang I/II
	Vol+		Vol+
	Input Down		CH- / Page-
	Vol-		Vol-
	ATT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-

Program







Original	Replacement	Original	Replacement
	Power CD		Power
	Menu CD		Menu / Home
	Up CD		Up
	Left CD		Left
	Enter CD		OK
	Right CD		Right
	Down CD		Down
	Info		Info / Angle
	Disc/Input		AV / Input / RDS
	Open/Close		Eject / Surround
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	Program		TV/Radio /
	Repeat		Green / APP / Repeat
	Input Up		CH+ / Page+
	Tone		Audio / Lang I/II
	Vol+		Vol+
	Input Down		CH- / Page-
	Vol-		Vol-
	ATT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-

Program



