



Original	Replacement
Power AMP	Power
Menu AMP	Menu / Home
UP AMP	Up
Left AMP	Left
Enter AMP	OK
Right AMP	Right
Down AMP	Down
Info	Info / Angle
Disc/Input	AV / Input / RDS
Open/Close	Eject / Surround
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
Stop	Stop / Hold
Random	Blue / Prime Video / Random
Program	TV/Radio /

Program

Original	Replacement
Repeat	Green / APP / Repeat
Input Up	CH+ / Page+
Tone	Audio / Lang I/II
Vol+	Vol+
Input Down	CH- / Page-
Vol-	Vol-
ATT	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-







Original	Replacement	Original	Replacement
	Power CD		Power
	Menu CD		Menu / Home
	Up CD		Up
	Left CD		Left
	Enter CD		OK
	Right CD		Right
	Down CD		Down
	Info		Info / Angle
	Disc/Input		AV / Input / RDS
	Open/Close		Eject / Surround
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	Program		TV/Radio /

Program

Original	Replacement
	Repeat
	Input Up
	Tone
	Vol+
	Input Down
	Vol-
	ATT
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+10

Green / APP / Repeat

CH+ / Page+

Audio / Lang I/II

Vol+

CH- / Page-

Vol-

Text / Goto

1

2

3

4

5

6

7

8

9

Guide / EPG / -/-





