



Original	Replacement
Sound Mode	Sound / Title
Phono	6
Balanced	7
CD	3
Record 1	1
Line 1	4
Record 2	2
Line 2	5
Trim	CH+ / Page+
Exit	Exit / Cancel / Clear
Tone	CH- / Page-
Up/+	Up
Left	Left
Enter	OK
Right	Right
Down/-	Down
Display	Display / Media

Original	Replacement
ATT	Setup / OPT /
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Scan	Red / Netflix / Search
Top Menu/AM/A	D.Menu / Top
Return/FM/B	Back / Return
Menu/<>	Menu / Home











 


 







Original	Replacement
Open/Close CD	Eject / Surround
Open/Close	+  Shift + Eject / Surround
Sound Mode CD	Sound / Title
Phono	6
Balanced	7
CD	3
Record 1	1
Line 1	4
Record 2	2
Line 2	5
Trim	CH+ / Page+
Exit CD	Exit / Cancel / Clear
Tone	CH- / Page-
Up/+ CD	Up
Up/+ Record 1	+  Shift + Up
Left CD	Left
Left Record 1	+  Shift + Left

Original	Replacement
Enter CD	OK
Enter Record 1	+  Shift + OK
Right CD	Right
Right Record 1	+  Shift + Right
Down/- CD	Down
Down/- Record	+  Shift + Down
Display	Display / Media
ATT	Setup / OPT /
Vol+	Vol+
Vol-	Vol-
I<< CD	I<< / Preset-
I<< Record 1	+  Shift + I<< / Preset-
Play CD	Play / Slow
Play Record 1	+  Shift + Play /
>>I CD	>>I / Preset+
>>I Record 1	+  Shift + >>I / Preset+
<< CD	<< / Tune-







Original	Replacement	Original	Replacement
	Open/Close		Eject / Surround
	Sound Mode		Sound / Title
	Phono		6
	Balanced		7
	CD		3
	Record 1		1
	Line 1		4
	Record 2		2
	Line 2		5
	Trim		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Tone		CH- / Page-
	Up/+		Up
	Left		Left
	Enter		OK
	Right		Right
	Down/-		Down

Original	Replacement	Original	Replacement
	Display		Display / Media
	ATT		Setup / OPT /
	Vol+		Vol+
	Vol-		Vol-
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	Scan		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	Top Menu/AM/A		D.Menu / Top
	Return/FM/B		Back / Return
	Menu/<>		Menu / Home





Original	Replacement
Open/Close	Eject / Surround
Sound Mode	Sound / Title
Phono	6
Balanced	7
CD	3
Record 1	1
Line 1	4
Record 2	2
Line 2	5
Trim	CH+ / Page+
Exit	Exit / Cancel / Clear
Tone	CH- / Page-
Up/+	Up
Left	Left
Enter	OK
Right	Right
Down/-	Down

Original	Replacement
Display	Display / Media
ATT	Setup / OPT /
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Stop	Stop / Hold
Scan	Red / Netflix / Search
Repeat	Green / APP / Repeat
Top Menu /	D.Menu / Top
Return / FM/B	Back / Return
Menu/<>	Menu / Home

