



Original	Replacement
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 4
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 5
iPod / USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH + / Page+

Original	Replacement
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Eco	D.Menu / Top
Mute	Mute / Dimmer
Volume-	Vol-
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Left	Left
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze





































 
 




 
 
 

 

 




 



 

 

 
 
 
 

 

 



Original	Replacement
	Power
	Shift + 0
	Shift + 2
	Shift + 1
	Shift + 4
	Shift + 7
	Shift + 6
	Shift + 9
	Shift + Fav / Marker / PC
	Shift + Guide / EPG / -/-
	Shift + 5
	Shift + 8
	Display / Media
	Shift + 3
	Smart / List
	Shift + Smart / List
	CH + / Page+

Original	Replacement
	Sleep / Timer
	Vol+
	CH- / Page-
	Mute / Dimmer
	Vol-
	Up
	Left
	Right
	Back / Return
	Down
	Menu / Home
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	Shift + << /
	I<< / Preset-
	Shift + >> / Tune+





Original	Replacement	Original	Replacement
	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 4
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 5
	iPod / USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+
	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>/Tune+		Shift + >> / Tune+



