



Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	TV Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 5		Volume-		Vol-
	AUX1		Shift + 7		Eco		D.Menu / Top
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	Game		Shift + Fav / Marker / PC		Option		Shift + Setup / OPT / Tools
	AUX2		Shift + Guide / EPG / -/-		Left		Left
	Phono		Shift + 4		Right		Right
	USB		Shift + 8		Back		Back / Return
	Media Player		Display / Media		Down		Down
	CD		Shift + 3		Setup		Setup / OPT /
	Online Music		Smart / List		Home		Menu / Home
	Internet Radio		Shift + Smart / List		Stop		Stop / Hold
	CH/Page+		CH+ / Page+		Pause		Pause / Step / Freeze





Original	Replacement
	Play / Slow
	I<< / Preset-
	+  Shift + << /
	>>I / Preset+
	+  Shift + >> /
	<< / Tune-
	>> / Tune+
	+  Shift + Red / Netflix /
	+  Shift + Green / APP /
	+  Shift + Yellow / YouTube /
	+  Shift + Blue / Prime
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	1
	2

Original	Replacement
	3
	4
	5
	6
	7
	8
	9
	0
	OK






Original	Replacement
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Shift + 1
Blu-ray	Shift + 5
AUX1	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Shift + Fav / Marker / PC
AUX2	Shift + Guide / EPG / -/-
Phono	Shift + 4
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Online Music	Smart / List
Internet Radio	Shift + Smart / List
CH/Page+	CH + / Page+

Original	Replacement
Sleep	Sleep / Timer
Volume+	Vol+
CH/Page-	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Up	Up
Left	Left
Right	Right
Back	Back / Return
Down	Down
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<</Tune-	Shift + << /
I<</Tune-	I<< / Preset-
>>I/Tune+	>>I / Preset+







Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Original	Replacement
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+



