



Original	Replacement	Original	Replacement
Sleep	Sleep / Timer	Eco	Menu / Home
Power	Power	Vol+	Vol+
CBL/SAT	0	CH/Page-	CH- / Page-
DVD	2	Mute	Mute / Dimmer
Blu-ray	Smart / List	Vol-	Vol-
Game	Fav / Marker / PC	Info	Info / Angle
AUX1	7	Option	Shift + Setup / OPT / Tools
Media Player	4	Up	Up
TV Audio	1	Left	Left
AUX2	Guide / EPG / -/--	Enter	OK
Tuner	6	Right	Right
iPod/USB	8	Back	Back / Return
CD	3	Down	Down
Bluetooth	9	Setup	Setup / OPT /
Online Music	Display / Media	I<</Tune-	<< / Tune-
Internet Radio	5	I<</Tune-	I<< / Preset-
CH/Page+	CH+ / Page+	Play	Play / Slow

Original	Replacement	Original	Replacement
Eco	Menu / Home	Eco	Menu / Home
Vol+	Vol+	Vol+	Vol+
CH/Page-	CH- / Page-	CH/Page-	CH- / Page-
Mute	Mute / Dimmer	Mute	Mute / Dimmer
Vol-	Vol-	Vol-	Vol-
Info	Info / Angle	Info	Info / Angle
Option	Shift + Setup / OPT / Tools	Option	Shift + Setup / OPT / Tools
Up	Up	Up	Up
Left	Left	Left	Left
Enter	OK	Enter	OK
Right	Right	Right	Right
Back	Back / Return	Back	Back / Return
Down	Down	Down	Down
Setup	Setup / OPT /	Setup	Setup / OPT /
I<</Tune-	<< / Tune-	I<</Tune-	<< / Tune-
I<</Tune-	I<< / Preset-	I<</Tune-	I<< / Preset-
Play	Play / Slow	Play	Play / Slow







Original	Replacement	Original	Replacement
	Sleep		Sleep / Timer
	Power		Power
	CBL/SAT		0
	DVD		2
	Blu-ray		Smart / List
	Game		Fav / Marker / PC
	AUX1		7
	Media Player		4
	TV Audio		1
	AUX2		Guide / EPG / -/--
	Tuner		6
	iPod/USB		8
	CD		3
	Bluetooth		9
	Online Music		Display / Media
	Internet Radio		5
	CH/Page+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	I<</Tune-		I<< / Preset-
	I<</Tune-		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/Tune+		>> / Tune+
	>>I/Tune+		>>I / Preset+
	Smart Select 1		Shift + 1



