



Original	Replacement
Power	Power
CBL/SAT	Shift + 0
DVD	Shift + 2
TV Audio	Audio / Lang I/II
Blu-ray	Shift + 1
AUX1	Shift + 7
M-XPport	Fav / Marker / PC
Tuner	Shift + 6
Game	Shift + Fav / Marker / PC
AUX2	Shift + 4
Phono	Shift + 9
iPod/USB	Shift + 8
Media Player	Shift + 5
CD	Shift + 3
Network	Guide / EPG / -/--
Internet Radio	Shift + Guide / EPG / -/--
CH/Page+	CH+ / Page+

Original	Replacement
Sleep	Sleep / Timer
Vol+	Vol+
CH/Page-	CH- / Page-
InstaPrevue	Smart / List
Mute	Mute / Dimmer
Vol-	Vol-
Info	Info / Angle
Up	Up
Option	Shift + Setup / OPT / Tools
Option	D.Menu / Top
Left	Left
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
Home	Menu / Home
Stop	Stop / Hold





Original	Replacement
	Pause / Step / Freeze
	Play / Slow
	Shift + << /
	Shift + << / Preset-
	Shift + >> /
	Shift + >> / Preset+
	<< / Tune-
	>> / Tune+
	Shift + Red / Netflix /
	Shift + Green / APP /
	Shift + Yellow / YouTube /
	Shift + Blue / Prime Video /
	Red / Netflix / Search
	Green / APP / Repeat
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	1

Original	Replacement
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK



 


Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + 1
 AUX1	 Shift + 7
 M-XPport	 Fav / Marker / PC
 Tuner	 Shift + 6
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + 4
 Phono	 Shift + 9
 iPod/USB	 Shift + 8
 Media Player	 Shift + 5
 CD	 Shift + 3
 Network	 Guide / EPG / -/--
 Internet Radio	 Shift + Guide / EPG / -/--
 CH/Page+	 CH+ / Page+

 
Original	Replacement
 Sleep	 Sleep / Timer
 Vol+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>/Tune+	 Shift + >> /

Tune+



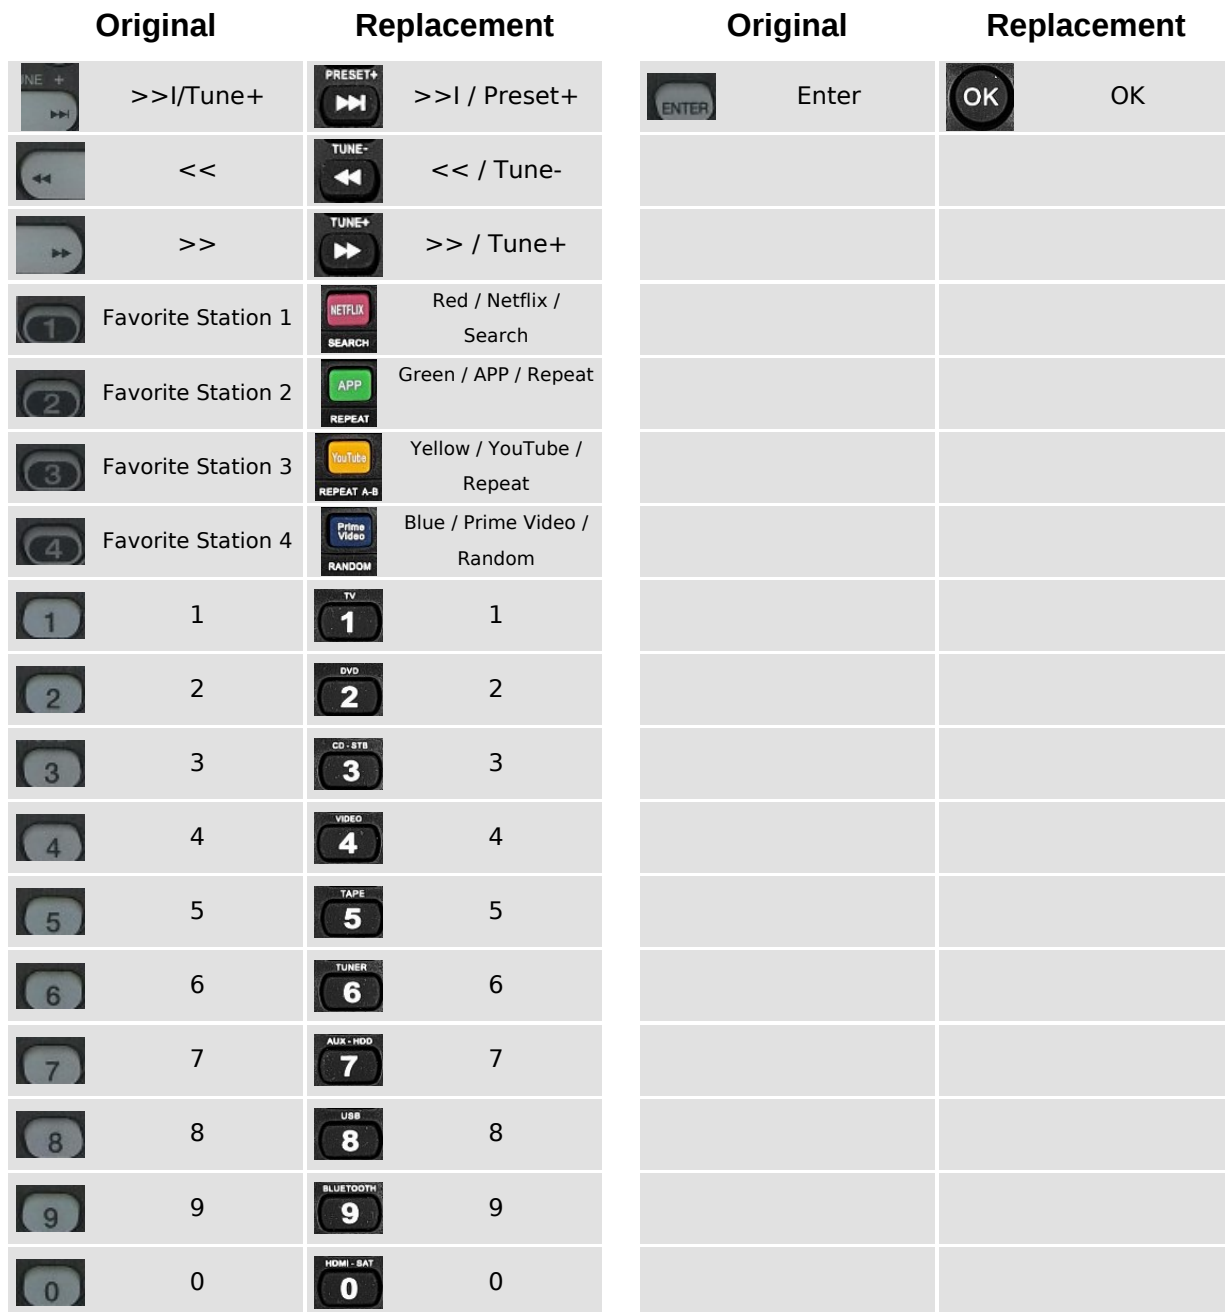



Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + 1
 AUX1	 Shift + 7
 M-XPport	 Fav / Marker / PC
 Tuner	 Shift + 6
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + 4
 Phono	 Shift + 9
 iPod/Usb	 Shift + 8
 Media Player	 Shift + 5
 CD	 Shift + 3
 Network	 Guide / EPG / -/--
 Internet Radio	 Shift + Guide / EPG / -/--
 CH/Page+	 CH+ / Page+

Original	Replacement
 Sleep	 Sleep / Timer
 Vol+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>/Tune+	 Shift + >> / Tune+



[illegible]