



Original	Replacement	Original	Replacement
Power	Power	Sleep	Sleep / Timer
CBL/ SAT	Shift + 0	Vol +	Vol +
DVD	Shift + 2	CH/ Page-	CH / Page-
TV Audi o	Audi o / Lang I / II	InstaPrevue	Smart / Li st
Bl u- ray	Shift + 1	Mute	Mute / Di mmer
AUX1	Shift + 7	Vol -	Vol -
M-XPor t	Fav / Marker / PC	I nf o	I nf o / Angl e
Tuner	Shift + 6	Up	Up
Game	Shift + Fav / Marker / PC	Opt i on	Shift + Set up / OPT / Tool s
AUX2	Shift + 4	Opt i on	D. Menu / Top
Phono	Shift + 9	Left	Left
i Pod/ USB	Shift + 8	Ri ght	Ri ght
Medi a Pl ayer	Shift + 5	Back	Back / Ret ur n
CD	Shift + 3	Down	Down
Net wor k	Gui de / EPG / - / - -	Set up	Set up / OPT /
I nt er net Radi o	Shift + Gui de / EPG / - / - -	Home	Menu / Home
CH/ Page+	CH+ / Page+	St op	St op / Hol d





Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Pl ay		Pl ay / Sl ow
	I <</ Tune-		Shi ft + << /
	I <</ Tune-		I << / Preset-
	Tune+ / >>		Shi ft + >> /
	Tune+ / >>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Favori te Station		Shi ft + Red / Netfl ix /
	Favori te Station		Shi ft + Green / APP /
	Favori te Station		Shi ft + Yel low / YouTube /
	Favori te Station		Shi ft + Bl ue / Pri ne
	Red/ Movi e		Red / Netfl ix / Search
	Green/ Musi c		Green / APP / Repeat
	Bl ue/ Game		Bl ue / Pri ne Vi deo / Random
	Yel low Pur e		Yel low / YouTube / Repeat
	1		1

Original	Replacement	Original	Replacement
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Ent er		OK





Original	Replacement
Power	Power
CBL/ SAT	Shift + 0
DVD	Shift + 2
Tv Audi o	Audi o / Lang I / II
Bl u- ray	Shift + 1
AUX1	Shift + 7
M-XPORt	Fav / Marker / PC
Tuner	Shift + 6
Game	Shift + Fav / Marker / PC
AUX2	Shift + 4
Phono	Shift + 9
i Pod/ USB	Shift + 8
Medi a Pl ayer	Shift + 5
CD	Shift + 3
Net wor k	Gui de / EPG / - / - / -
I nt er net Radi o	Shift + Gui de / EPG / - / - / -
CH/ Page+	CH+ / Page+

Original	Replacement
Sl eep	Sl eep / Ti mer
Vol +	Vol +
CH/ Page-	CH- / Page-
Mut e	Mut e / Di mmer
Vol -	Vol -
Up	Up
Lef t	Lef t
Ri ght	Ri ght
Back	Back / Ret urn
Down	Down
Home	Menu / Home
St op	St op / Hol d
Pause	Pause / Step / Freeze
Pl ay	Pl ay / Sl ow
I <</ Tune-	Shift + << /
I <</ Tune-	I << / Preset-
>>/ Tune+	Shift + >> /

Tune+

 


 
 


Original		Replacement	
	>> / Tune+		>> / Preset +
	<<		<< / Tune-
	>>		>> / Tune+
	Favorite Station		Red / Netflix / Search
	Favorite Station		Green / APP / Repeat
	Favorite Station		Yellow / YouTube / Repeat
	Favorite Station		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

[illegible]



Original	Replacement
 Power	 Power
 CBL/ SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audi o	 Audi o / Lang I / II
 Bl u- ray	 Shift + 1
 AUX1	 Shift + 7
 M-XPORt	 Fav / Marker / PC
 Tuner	 Shift + 6
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + 4
 Phono	 Shift + 9
 i Pod/ USb	 Shift + 8
 Medi a Pl ayer	 Shift + 5
 CD	 Shift + 3
 Net wor k	 Gui de / EPG / - / - / -
 I nt er net Radi o	 Shift + Gui de / EPG / - / - / -
 CH/ Page+	 CH+ / Page+

Original	Replacement
 Sl eep	 Sl eep / Ti mer
 Vol +	 Vol +
 CH/ Page-	 CH / Page-
 Mut e	 Mut e / Di mmer
 Vol -	 Vol -
 Up	 Up
 Lef t	 Lef t
 Ri ght	 Ri ght
 Back	 Back / Ret urn
 Down	 Down
 Home	 Menu / Home
 St op	 St op / Hol d
 Pause	 Pause / Step / Freeze
 Pl ay	 Pl ay / Sl ow
 I <</ Tune-	 Shift + << /
 I <</ Tune-	 I << / Preset-
 >>/ Tune+	 Shift + >> /

Tune+



[illegible]