



Original	Replacement	Original	Replacement
	Power		Power
	Open/Close		Eject
	Mode/HDMI		Shift + AV
	Reso/Resolution		Shift + TV/R
	Home		Smart
	Pure/Pure Direct		Shift + Subt
	Mode/Sound		Sleep
	P/D/Prog Direct		Shift + Options
	ADJ./Pict.		Shift + Format
	CLR/Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Call		Pre Ch
	Input Up		Ch +
	Input Down		Ch -
	Power Amp		Shift + Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Top Menu		Menu
	Pop Up Menu		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right





Original	Replacement
	Down
	Options
	Back
	AV
	Stop
	Pause
	Play
	I<<
	>>I
	<<
	>>
	List
	Subt
	Dual
	TV/R
	D. Menu
	Text

Original	Replacement
	Shift + Text
	Format
	Info
	3D
	Red
	Green
	Yellow
	Blue





Original	Replacement	Original	Replacement
Power	Power	8	8
Open/Close	Eject	9	9
Mode/HDMI	Shift + AV	0	0
Reso/Resolution	Shift + TV/R	+10	Guide
Home	Smart	Call	Pre Ch
Pure/Pure Direct	Shift + Subt	Input Up	Ch +
Mode/Sound	Sleep	Input Down	Ch -
P/D/Prog Direct	Shift + Options	Power Amp	Shift + Power
ADJ./Pict.	Shift + Format	Mute	Mute
CLR/Clear	Exit	Vol+	Vol +
1	1	Vol-	Vol -
2	2	Top Menu	Menu
3	3	Pop-Up Menu	Media
4	4	Up	Up
5	5	Left	Left
6	6	Enter	Ok
7	7	Right	Right





Original	Replacement
	Down
	Options
	Back
	AV
	Stop
	Pause
	Play
	I<<
	>>I
	<<
	>>
	List
	Subt
	Dual
	TV/R
	D. Menu
	Text

Original	Replacement
	Shift + Text
	Format
	Info
	3D
	Red
	Green
	Yellow
	Blue

