



Original	Replacement	Original	Replacement
	Open/Close		Eject / Surround
	Power		Power
	HDMI Mode		Shift + 0
	Resolution		Shift + Picture / Format
	Home		Smart / List
	Home		Shift + Menu /
	Pure Direct		Shift + Sound / Title
	1		1
	2		2
	3		3
	Sound Mode		Sound / Title
	4		4
	5		5
	6		6
	Prog Direct		TV/Radio /
	7		7
	8		8
	9		9
	Pict. ADJ.		Picture / Format
	+10		Guide / EPG / -/--
	0		0
	Call		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	Input Up		CH+ / Page+
	Power Amp		Shift + Power
	Mute		Mute / Dimmer
	Vol+		Vol+
	Input Down		CH- / Page-
	Vol-		Vol-
	Top Menu		D.Menu / Top
	Up		Up
	Pop Up Menu		Menu / Home
	Left		Left
	Enter		OK







Original	Replacement
	Eject / Surround
	Power
	Shift + 0
	Shift + Picture / Format
	Shift + Menu /
	Smart / List
	Shift + Sound / Title
	1
	2
	3
	Sound / Title
	4
	5
	6
	TV / Radio /
	7
	8

Original	Replacement
	9
	Picture / Format
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Exit / Cancel / Clear
	CH+ / Page+
	Shift + Power
	Mute / Dimmer
	Vol+
	CH- / Page-
	Vol-
	D.Menu / Top
	Up
	Menu / Home
	Left
	OK



