



Original	Replacement	
	Power	Shift + Power
	AMP Power	Power
	CD	Shift + 3
	Tuner	Shift + 6
	Network	Shift + Fav / Marker / PC
	Phono	Shift + 4
	Recorder 1	Shift + 5
	Recorder 2	Shift + 7
	I<<<	I<<< / Preset-
	>>>	>>> / Preset+
	Pause	Pause / Step / Freeze
	Play	Play / Slow
	Stop	Stop / Hold
	Input	Display / Media
	Source Direct	AV / Input / RDS
	Volume+	Vol+
	Info	Info / Angle

Original	Replacement	
	Mute	Mute / Dimmer
	Volume-	Vol-
	Time/Top Menu	D.Menu / Top
	Mode	Zoom / Size
	Up	Up
	Left	Left
	Enter	OK
	Right	Right
	Prog/Favorites	Fav / Marker / PC
	Down	Down
	Setup	Setup / OPT /
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6





Original	Replacement
Power	Shift + Power
AMP Power	Power
CD	Shift + 3
Tuner	Shift + 6
Network	Shift + Fav / Marker / PC
Phono	Shift + 4
Recorder1	Shift + 5
Recorder2	Shift + 7
Pitch Control-	CH- / Page-
Reset	Back / Return
Pitch Control+	CH+ / Page+
I<<	I<< / Preset-
Sound Mode	Sound / Title
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold

Original	Replacement
Input	Display / Media
Source Direct	AV / Input / RDS
Volume+	Vol+
Info	Info / Angle
Mute	Mute / Dimmer
Volume-	Vol-
Time/Top Menu	D.Menu / Top
Mode	Zoom / Size
Up	Up
Left	Left
Enter	OK
Right	Right
Prog/Favorites	Fav / Marker / PC
Down	Down
Setup	Setup / OPT /
1	1
2	2



