



Original	Replacement
Power	Shift + Power
AMP Power	Power
Tuner Preset ▼	CH- / Page-
Tuner Preset ▲	CH+ / Page+
Tuner	Shift + 6
CD	Shift + 3
Recorder	Rec / Rec Mode
Network	Shift + 4
Phono	Shift + 5
Coaxial	D.Menu / Top
Optical	Shift + 7
I<<	I<< / Preset-
Sound Mode	Sound / Title
>>I	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
Input	AV / Input / RDS
Info	Info / Angle
Source Direct	Smart / List
Mute	Mute / Dimmer
Volume+	Vol+
Volume-	Vol-
Time/Home	Display / Media
Mode	Picture / Format
Prog/Favorite	Fav / Marker / PC
Menu	Menu / Home
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
1	1
2	2





Original	Replacement
Power	Shift + Power
AMP Power	Power
Tuner	Shift + 6
Tuner Preset ▼	CH- / Page-
Tuner Preset ▲	CH+ / Page+
CD	Shift + 3
Recorder	Shift + 8
Network	Shift + 4
Phono	Shift + 5
Coaxial	Shift + 9
Optical	Shift + 7
I<<	I<< / Preset-
Sound Mode	Sound / Title
>>I	>>I / Preset+
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
Input	Display / Media
Source Direct	AV / Input / RDS
Volume+	Vol+
Info	Info / Angle
Mute	Mute / Dimmer
Volume-	Vol-
Time/Home	Sleep / Timer
Mode	Picture / Format
Up	Up
Left	Left
Enter	OK
Right	Right
Prog/Favorite	Fav / Marker / PC
Down	Down
Menu	Menu / Home
1	1
2	2



