



Original	Replacement	Original	Replacement
	Standby		Tune
	On		Shift + 6
	HDMI		Shift + 8
	Zone A		Shift + Guide / EPG / - / -
	Zone B		CH+ / Page+
	A/D		Set up / OPT /
	ATT		Mute / Dimmer
	SPKR A-B		Vol +
	7.1		CH- / Page-
	BD		Display / Media
	DVD		Eject / Surround
	VCR		Vol -
	DSS		Top
	TV		Up
	CD		Info
	CDR		Left
	AUX		Enter
			Right






Original		Replacement		Original		Replacement	
	Menu		Menu / Home		Treble-		<< / Preset-
	Down		Down		Treble+		>> / Preset+
	Exit		Exit / Cancel / Clear		CH-		Shift + CH- /
	HT-EQ		Guide / EPG / - / -		Bass-		<< / Tune-
	Auto		1		CH+		Shift + CH+ /
	Stereo		2		Bass+		>> / Tune+
	P.Direct		3				
	Sleep		Sleep / Timer				
	Sleep		4				
	M-Dax		5				
	EQ		6				
	EQ		Subtitle / EQ				
	LIP Sync		7				
	Night		8				
	T. Tone		Text / Goto				
	CH Sel		0				
	V-Off		9				





Original	Replacement	Original	Replacement
	Power		Power
	Set up		Set up / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol +
	Display		Display / Media
	Volume-		Vol -
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Menu		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Left		Left / Preset-
	Right		Right / Preset +
	Left		Left / Tune-
	Right		Right / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-



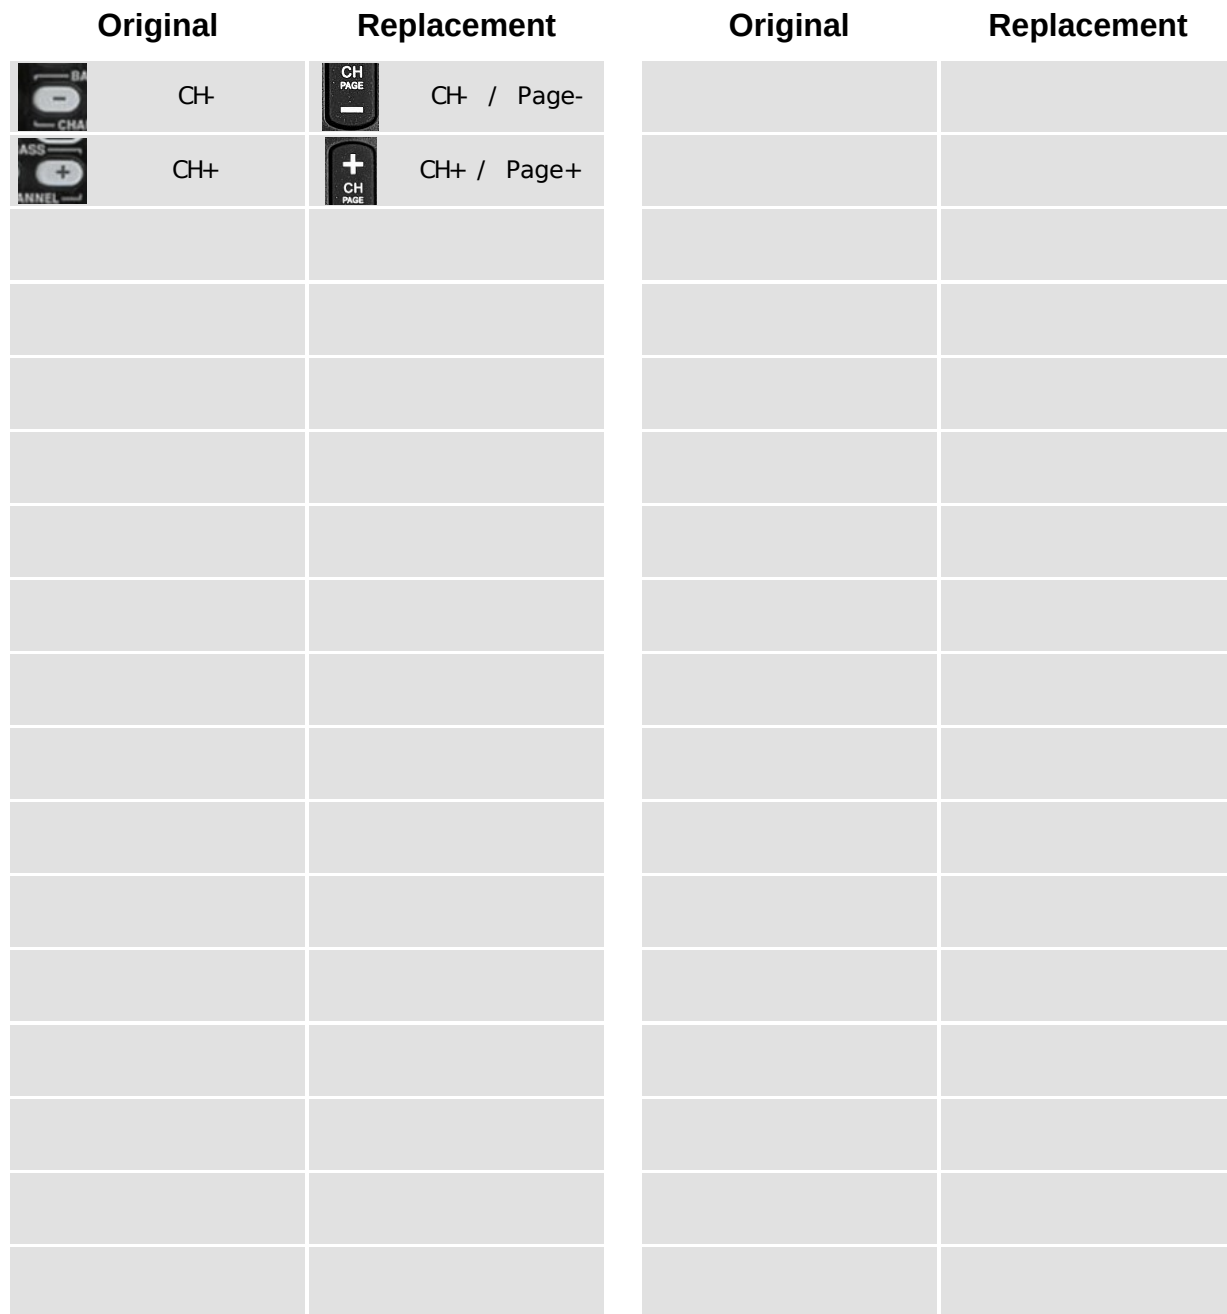



Original	Replacement	Original	Replacement
	Power		2
	Mute		3
	Volume+		4
	Display		5
	Volume-		6
	Tune+		7
	Info		8
	Preset-		9
	Enter		CLR
	Preset+		0
	Menu		CAT-
	Tune-		CAT+
	Memo		
	T. Mode		
	P. Scan		
	Band		
	1		
	Power		2
	Mute / Dimmer		3
	Vol +		4
	Display / Media		5
	Vol -		6
	>> / Tune+		7
	Info / Angle		8
	I << / Preset-		9
	OK		Exit / Cancel / Clear
	>> / Preset+		0
	Menu / Home		CH- / Page-
	<< / Tune-		CH+ / Page+
	Smart / List		
	Text / Goto		
	D. Menu / Top		
	Set up / OPT /		
	1		

