



Original	Replacement
	Standby
	On
	HDMI
	Zone A
	Zone B
	A/D
	ATT
	SPKR A-B
	7.1
	BD
	DVD
	VCR
	DSS
	TV
	CD
	CDR
	AUX

Original	Replacement
	Tune
	USB
	M-XP
	Input Up
	Setup
	Mute
	Volume+
	Input Down
	Display
	Surr
	Volume-
	Top
	Up
	Info
	Left
	Enter
	Right




[illegible]



Original	Replacement	Original	Replacement
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-

Original	Replacement	Original	Replacement
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-



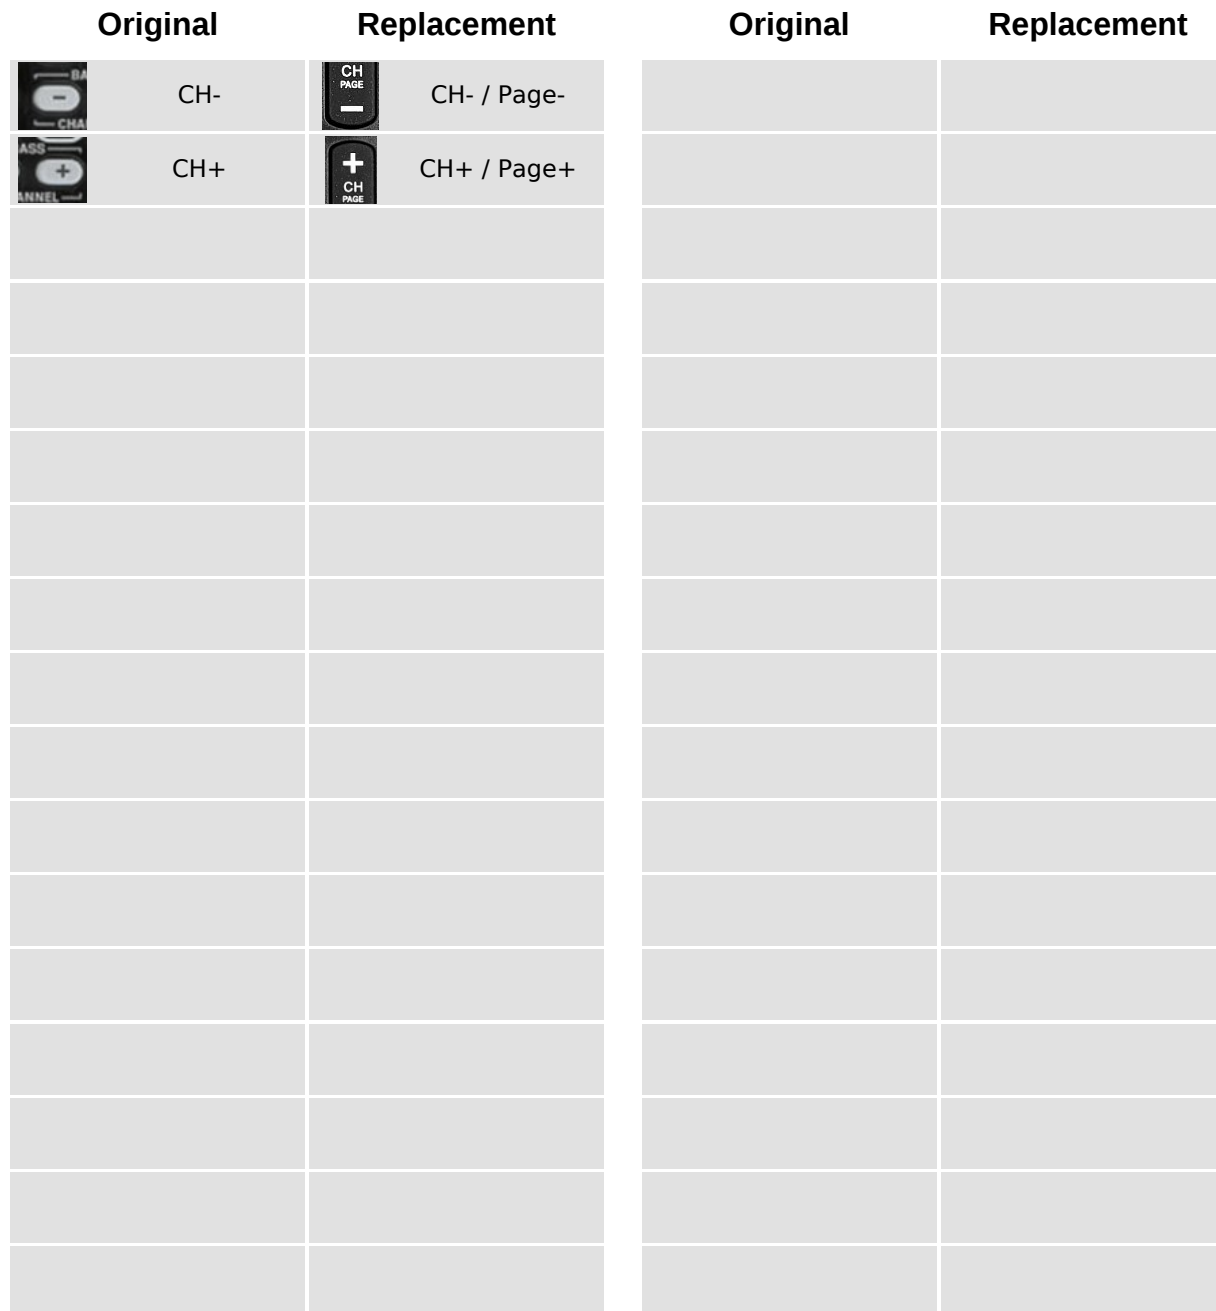



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Display	 Display / Media
 Volume-	 Vol-
 Tune+	 >> / Tune+
 Info	 Info / Angle
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Menu	 Menu / Home
 Tune-	 << / Tune-
 Memo	 Smart / List
 T.Mode	 Text / Goto
 P.Scan	 D.Menu / Top
 Band	 Setup / OPT /
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CLR	 Exit / Cancel / Clear
 0	 0
 CAT-	 CH- / Page-
 CAT+	 CH+ / Page+

