



Original	Replacement
	Open/Close
	Power/On/Standby
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+10
	0
	Clear/Del
	Prog/Direct
	Random
	Repeat
	Eject / Surround
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Exit / Cancel / Clear
	TV/Radio /
	Blue / Prime Video / Random
	Green / APP / Repeat

Original	Replacement
	Input Up
	Mute
	Vol+
	Input Down
	Tone
	Vol-
	Time/Display
	Folder Up
	Menu
	Left
	Enter/Memo
	Right
	Folder Mode
	Folder Down
	Direct/Remote
	I<</CH-
	Play
	CH+ / Page+
	Mute / Dimmer
	Vol+
	CH- / Page-
	Sound / Title
	Vol-
	Display / Media
	Up
	Menu / Home
	Left
	OK
	Right
	Picture / Format
	Down
	D.Menu / Top
	I<< / Preset-
	Play / Slow



