




Original	Replacement
	Power TV
	Power DVD
	Power
	Power AUX
	A1/Video
	H1/HDMI 1
	d1/DVD
	A2/AUX
	H2/HDMI 2
	d2/TV
	d3/Game
	Seat
	Night Mode
	Dolby PL II
	Elevation
	Bilingual
	Mode
	Smart / List
	Display / Media
	Power
	Shift + Power
	Shift + 4
	Shift + 8
	Shift + 2
	Shift + 7
	Shift + 0
	Shift + 1
	Shift + Fav / Marker / PC
	D.Menu / Top
	Sleep / Timer
	Sound / Title
	Text / Goto
	Audio / Lang I/II
	Setup / OPT /

Original	Replacement
	Dimmer
	Subwoofer
	Main Volume +
	Mute
	Main Volume -
	Input Select
	Tv Vol+
	Up A2
	Tv Mute
	CH-
	Enter A2
	CH+
	Tv Vol-
	Down A2
	Menu A2
	1
	Repeat A2
	Shift + Mute / Dimmer
	Subtitle / EQ
	Vol+
	Mute / Dimmer
	Vol-
	AV / Input / RDS
	Shift + Vol+
	Up
	Info / Angle
	CH- / Page-
	OK
	CH+ / Page+
	Shift + Vol-
	Down
	Menu / Home
	1
	Green / APP / Repeat



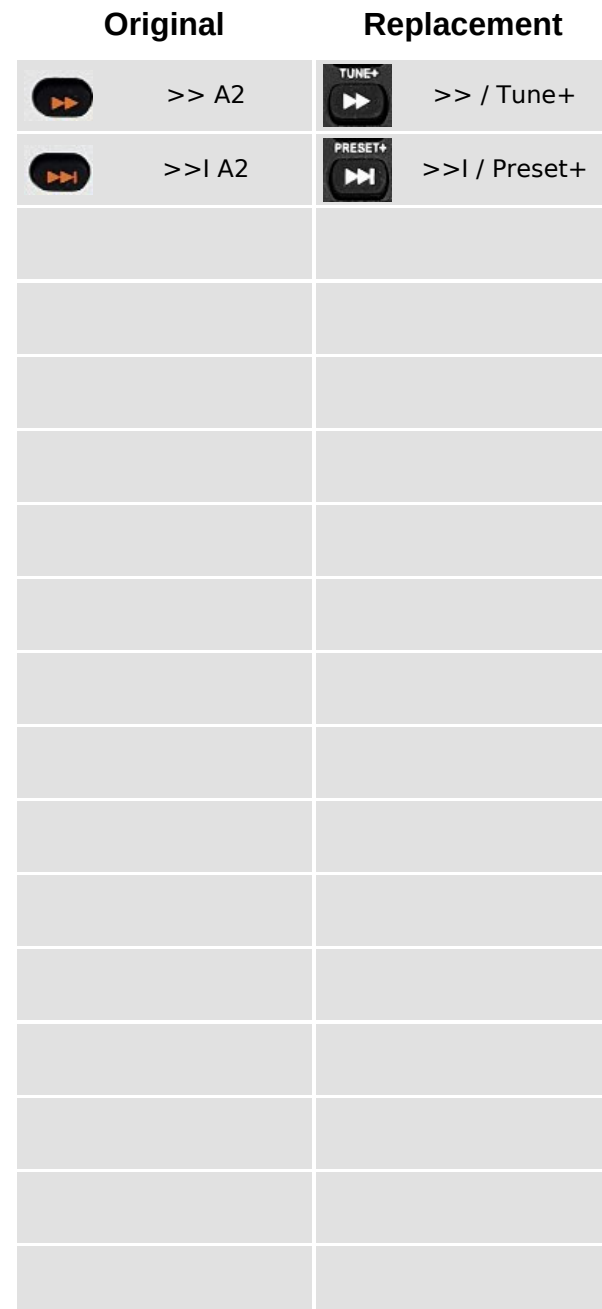



Original	Replacement
 Power	 Power
 A1/Video	 4
 H1/HDMI 1	 8
 d1/DVD	 2
 A2/AUX	 7
 H2/HDMI 2	 0
 d2TV	 1
 d3/Game	 Fav / Marker / PC
 Mode	 Setup / OPT /
 Main Volume +	 Vol+
 Mute	 Mute / Dimmer
 Main Volume -	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top

Menu

Original	Replacement
 Down	 Down
 Menu	 Menu / Home
 Repeat	 Green / APP / Repeat
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+

