



Original	Replacement	Original	Replacement
	Power 1		Power
	Power 2		Shift + Power
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	A. F/P		Guide / EPG / -/-
	7		7
	8		8
	9		9
	B. -/-		Fav / Marker / PC
	-		CH- / Page-
	0		0
	+		CH+ / Page+
	TV		Shift + 1
	Phono		Shift + 9
	CD		Shift + 3
	Tuner		Shift + 6
	Tape 3/VCR		Shift + 4
	TV1/AUX2		Shift + 7
	DVD		Shift + 2
	Tape 1		Shift + 5
	Tape 2		Shift + 8
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Mode		Menu / Home
	Memo		Info / Angle
	Text/1-Mode		Smart / List
	Time/Mode-2		Display / Media





Original	Replacement	Original	Replacement
 Power 1	 Power	 +	 CH+ / Page+
 Power 2	 Shift + Power	 I<<	 I<< / Preset-
 Vol-	 Vol-	 >>I	 >>I / Preset+
 Vol+	 Vol+	 <<	 << / Tune-
 1	 1	 Play	 Play / Slow
 2	 2	 >>	 >> / Tune+
 3	 3	 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer	 Stop	 Stop / Hold
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 Mode	 Menu / Home
 6	 6	 Memo	 Info / Angle
 A. F/P	 Guide / EPG / -/--	 Time/Mode-2	 Display / Media
 7	 7		
 8	 8		
 9	 9		
 B. -/--	 Fav / Marker / PC		
 0	 0		





Original	Replacement	Original	Replacement
	Power 1		Power
	Power 2		Shift + Power
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	A. F/P		Guide / EPG / -/--
	7		7
	8		8
	9		9
	B. -/--		Fav / Marker / PC
	-		CH- / Page-
	0		0
	+		CH+ / Page+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Open/Close		Eject / Surround
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Mode		Menu / Home
	Memo		Info / Angle
	Time/Mode-2		Display / Media





Original	Replacement	Original	Replacement
 Power 1	 Power	 0	 0
 Power 2	 Shift + Power	 +	 CH+ / Page+
 Vol-	 Vol-	 I<<	 I<< / Preset-
 Vol+	 Vol+	 >>I	 >>I / Preset+
 1	 1	 <<	 << / Tune-
 2	 2	 Play	 Play / Slow
 3	 3	 >>	 >> / Tune+
 Mute	 Mute / Dimmer	 Open/Close	 Eject / Surround
 4	 4	 <>	 OK
 5	 5	 Stop	 Stop / Hold
 6	 6	 Pause	 Pause / Step / Freeze
 A. F/P	 Guide / EPG / -/--	 Mode	 Menu / Home
 7	 7	 Memo	 Info / Angle
 8	 8	 Text/1-Mode	 Smart / List
 9	 9	 Time/Mode-2	 Display / Media
 B. -/--	 Fav / Marker / PC		
 -	 CH- / Page-		

