

 
 

 
 

 





 





 





 
 


 

 
 

 












 

 


 




 







 
 


 









 

 





 





 

 



 








 
 



 






 


	Original	Replacement		Original	Replacement
	Standby FM-AM		Power		AMS/-/-- FM-AM
	Volume Down		Vol-		Memo/CH/PGM
	Volume Up		Vol+		Fav / Marker / PC
	L FM-AM		Left		CH+ / Page+
	R FM-AM		Right		CH- / Page-
	Front		Up		Mute FM-AM
	Rear		Down		Mute / Dimmer
	1 FM-AM		1		Mute / Dimmer
	2 FM-AM		2		Mode FM-AM
	3 FM-AM		3		Deck A
	4 FM-AM		4		Deck B
	5 FM-AM		5		FM/AM
	6 FM-AM		6		CD
	7 FM-AM		7		TV
	8 FM-AM		8		VCR
	9 FM-AM		9		VCR
	10/0 FM-AM		0		Phono
					Phono
					1 Phono
					2 Phono
					Shift +  1
					Shift +  2





Original	Replacement
 Stanby CD	 Power
 Volume Down	 Vol-
 Volume Up CD	 Vol+
 CD	 Yellow / YouTube / Repeat
 Deck A	 Red / Netflix / Search
 Deck B	 Green / APP / Repeat
 FM/AM	 Blue / Prime Video / Random
 VCR	 Smart / List
 TV	 TV/Radio /
 Tape	 Display / Media
 Phono	 Zoom / Size
 CDV	 AV / Input / RDS
 L CD	 Left
 R CD	 Right
 + CD	 CH+ / Page+
 - CD	 CH- / Page-
 Mute CD	 Mute / Dimmer

Original	Replacement
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 10/0	 0
 AMS/-/-- CD	 Guide / EPG / -/--
 Memo/CH/PGM	 Fav / Marker / PC
 Play CD	 Play / Slow
 Pause CD	 Pause / Step / Freeze
 Stop CD	 Stop / Hold
 << CD	 << / Tune-
 >> CD	 >> / Tune+











 



 

 

 





 









 



 

 

 

 







 

 

 

 

 

 



 





Original	Replacement
Standby VCR	Shift + Power
Volume Down	Shift + Vol-
Volume Up VCR	Shift + Vol+
L VCR	Shift + Left
R VCR	Shift + Right
+ VCR	Shift + CH+ /
- VCR	Shift + CH- /
Mute VCR	Shift + Mute / Dimmer
Mode VCR	Shift + D.Menu / Top Menu
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
6 VCR	Shift + 6
5 VCR	Shift + 5
7 VCR	Shift + 7
8 VCR	Shift + 8

Original	Replacement
9 VCR	Shift + 9
10/0 VCR	Shift + 0
AMS/-/- VCR	Shift + Guide / EPG / -/-
Memo/CH/PGM	Shift + Fav / Marker / PC
Play VCR	Shift + Play /
Pause VCR	Shift + Pause / Step /
Stop VCR	Shift + Stop /
<> VCR	Shift + >> / Preset+
>> VCR	Shift + >> /
<< VCR	Shift + << /
Rec VCR	Shift + Rec / Rec Mode





Original	Replacement	Original	Replacement
 Standby	 Power	 +	 CH+ / Page+
 Volume Up	 Vol+	 -	 CH- / Page-
 Volume Down	 Vol-	 Mute	 Mute / Dimmer
 Deck A	 Red / Netflix / Search	 AMS/--/-	 Guide / EPG / -/--
 Deck B	 Green / APP / Repeat	 Memo/CH/PGM	 Fav / Marker / PC
 L	 Left	 Play	 Play / Slow
 R	 Right	 Pause	 Pause / Step / Freeze
 1	 1	 >>	 >> / Tune+
 2	 2	 <<	 << / Tune-
 3	 3	 Rec	 Rec / Rec Mode
 4	 4	 Stop	 Stop / Hold
 5	 5	 <<>	 I<< / Preset-
 6	 6	 CD	 Yellow / YouTube / Repeat
 7	 7	 FM/AM	 Blue / Prime Video / Random
 8	 8	 TV	 TV/Radio /
 9	 9	 VCR	 Smart / List
 10/0	 0	 Tape	 Display / Media





Original	Replacement	Original	Replacement
Deck A	Red / Netflix / Search	Mode TV	Shift + D.Menu / Top Menu
Deck B	Green / APP / Repeat	1 TV	Shift + 1
FM/AM	Blue / Prime Video / Random	2 TV	Shift + 2
CD	Yellow / YouTube / Repeat	3 TV	Shift + 3
TV	TV/Radio /	4 TV	Shift + 4
Tape	Display / Media	5 TV	Shift + 5
VCR	Smart / List	6 TV	Shift + 6
CDV	AV / Input / RDS	7 TV	Shift + 7
Phono	Zoom / Size	8 TV	Shift + 8
Standby TV	Shift + Power	9 TV	Shift + 9
Volume Down	Shift + Vol-	10/0 TV	Shift + 0
Volume Up TV	Shift + Vol+	Memo/CH/PGM	Shift + Fav / Marker / PC
L TV	Shift + Left	AMS/-/-- TV	Shift + Guide / EPG / -/--
R TV	Shift + Right	Standby CDV	Power
+ TV	Shift + CH+ /	Volume Up CVD	Vol+
- TV	Shift + CH- /	Volume Down	Vol-
Mute TV	Shift + Mute / Dimmer	L CDV	Left





	Original	Replacement
	R CDV	Right
	+ CDV	CH+ / Page+
	- CDV	CH- / Page-
	Mute CDV	Mute / Dimmer
	Mode CDV	D.Menu / Top
	1 CDV	1
	2 CDV	2
	3 CDV	3
	4 CDV	4
	5 CDV	5
	6 CDV	6
	7 CDV	7
	8 CDV	8
	9 CDV	9
	10/0 CDV	0
	Play CDV	Play / Slow
	Memo/CH/PGM	Fav / Marker / PC

	Original	Replacement
	Pause CDV	Pause / Step / Freeze
	Stop CDV	Stop / Hold
	<< CDV	<< / Tune-
	>> CDV	>> / Tune+

