



Original	Replacement
Power	Power
Internet Radio	Shift + TV/Radio / Program
USB	Shift + 8
Music Servers	Yellow / YouTube / Repeat
AUX	Shift + 7
Recorder	Rec / Rec Mode
OPT/Coax	Shift + Setup / OPT / Tools
CD	Shift + 3
Bluetooth	Shift + 9
Phono	Audio / Lang I/II
I<<	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Stop	Stop / Hold
Favorites Call	Smart / List
Favorites Add	Fav / Marker / PC

Original	Replacement
Input	AV / Input / RDS
Info	Info / Angle
Source Direct	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Queue/Program	TV/Radio /
Option/Mode	Setup / OPT /
Back	Back / Return
Setup	Menu / Home
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
1	1
2	2





Original	Replacement
Power CD	Power
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Source Direct	Display / Media
Mute	Mute / Dimmer
Input	AV / Input / RDS
Vol+	Vol+
Vol-	Vol-
Queue/Program	TV/Radio /
Option/Mode	Setup / OPT /
Back	Back / Return
Up	Up
Setup	Menu / Home
Down	Down

Original	Replacement
Enter	OK
Right	Right
Left	Left
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/-
Clear	Exit / Cancel / Clear
Dimmer	Shift + Dimmer / Mute / Dimmer
Random	Blue / Prime Video / Random



