



| Original | Replacement |
|----------------|-----------------------------|
| Power NET | + Shift + Power |
| AMP Power | Power |
| Network | + Shift + 1 |
| CD | + Shift + 3 |
| Recorder | + Shift + 2 |
| Tuner | + Shift + 6 |
| Phono | + Shift + 5 |
| Coaxial | + Shift + 4 |
| Optical | + Shift + 7 |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| >>I | >>I / Preset+ |
| Favorites Call | CH+ / Page+ |
| Stop | Stop / Hold |
| Favorites Add | CH- / Page- |
| Input | + Shift + AV / Input / RDS |

| Original | Replacement |
|---------------|--------------------------------|
| Source Direct | AV / Input / RDS |
| Volume+ | Vol+ |
| Info | Info / Angle |
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Queue | Display / Media |
| Option | + Shift + Setup / OPT / Tools |
| Up | Up |
| Left | Left |
| Enter | OK |
| Right | Right |
| Back | Back / Return |
| Down | Down |
| Setup | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |





| Original | Replacement |
|---------------|--------------------------|
| Power CD | Shift + Power |
| AMP Power | Power |
| Open/Close | Eject / Surround |
| Network | Shift + 1 |
| CD | Shift + 3 |
| Recorder | Shift + 2 |
| Tuner | Shift + 6 |
| Phono | Shift + 5 |
| Coaxial | Shift + 4 |
| Optical | Shift + 7 |
| I<< | I<< / Preset- |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| >>I | >>I / Preset+ |
| Stop | Stop / Hold |
| Input | Shift + AV / Input / RDS |
| Source Direct | AV / Input / RDS |

| Original | Replacement |
|----------|-----------------------------|
| Volume+ | Vol+ |
| Info | Info / Angle |
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Option | Shift + Setup / OPT / Tools |
| Up | Up |
| Left | Left |
| Enter | OK |
| Right | Right |
| Back | Back / Return |
| Down | Down |
| Setup | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |



