



Original	Replacement
Standby	Shift + Power
On	Power
HDMI	AV / Input / RDS
A/D	Audio / Lang I/II
Test Tone	Text / Goto
SPKR A-B	Setup / OPT /
Z2	Yellow / YouTube / Repeat
Z3	Blue / Prime Video / Random
BD	Green / APP / Repeat
DVD	2
VCR	4
SAT	0
GAME	Fav / Marker / PC
AUX1	7
Network	9
USB	8
TV	1

Original	Replacement
CD	3
CDR	Guide / EPG / -/-
Tune	6
M-XP	5
Input Up	>>I / Preset+
Mute	Mute / Dimmer
Volume+	Vol+
Input Down	I<< / Preset-
Display	Display / Media
Surr	Eject / Surround
Volume-	Vol-
Shift	Back / Return
Up	Up
Info	Info / Angle
Search	Red / Netflix / Search
Left	Left
Enter	OK





Original	Replacement	Original	Replacement
	Right		Right
	Menu		Menu / Home
	Down		Down
	Auto		Smart / List
	Stereo		Sound / Title
	P.Direct		Picture / Format
	MultEQ		Subtitle / EQ
	M-DAX		D.Menu / Top
	DYN EQ		Shift + Subtitle / EQ
	DYN Vol		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	Channel-		CH- / Page-
	Channel+		CH+ / Page+

Original	Replacement	Original	Replacement




 


Original	Replacement

Original	Replacement

 



















 

 

 











 







 



 



 



Original	Replacement	Original	Replacement
	CH- / Page-		
	CH+ / Page+		





Original		Replacement	
	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	T.Mode		Text / Goto
	Display		Display / Media
	Memory		Setup / OPT /
	Volume-		Vol-
	Info		Info / Angle
	Enter		OK
	Menu		Menu / Home
	Band		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original		Replacement	
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	Tune-		<< / Tune-
	Tune+		>> / Tune+
	Preset-		I<< / Preset-
	Preset+		>>I / Preset+

