



Original	Replacement	Original	Replacement
On / Standby	Power	Volume+	Vol +
CBL / SAT	Shift + 0	CH / Page-	CH / Page-
DVD	Shift + 2	Sleep	Sleep / Timer
TV Audio	Audio / Lang I / II	Mute	Mute / Dimmer
Blu-ray	Shift + 1	Volume-	Vol -
AUX1	Shift + 7	Info	Info / Angle
M-XP	Fav / Marker / PC	Up	Up
Tuner	Shift + 6	Option	Shift + Set up / OPT / Tools
Game	Shift + Fav / Marker / PC	Option	D. Menu / Top
AUX2	Shift + 4	Left	Left
Phono	Shift + 9	Enter	OK
iPod / USB	Shift + 8	Right	Right
Media Player	Shift + 5	Back	Back / Return
CD	Shift + 3	Down	Down
Network	Guide / EPG / - / - / -	Setup	Set up / OPT /
Internet Radio	Shift + Guide / EPG / - / - / -	Pause	Pause / Step / Freeze
CH / Page+	CH+ / Page+	Stop	Stop / Hold





 
Original		Replacement	
	Pl ay		Pl ay / Sl ow
	I <</ Tune-		+  Shift + << /
	I <</ Tune-		I << / Preset -
	Tune+ / >>		+  Shift + >> /
	Tune+ / >>		>> / Preset +
	<<		<< / Tune-
	>>		>> / Tune+
	Favorite Station		+  Shift + Red / Netflix /
	Favorite Station		+  Shift + Green / APP /
	Favorite Station		+  Shift + Yellow / YouTube /
	Favorite Station		+  Shift + Blue / Prime
	Red/ Movi e		Red / Netflix / Search
	Green/ Musi c		Green / APP / Repeat
	Bl ue/ Game		Bl ue / Prime Video / Random
	Yel low/ Pure		Yel low / YouTube / Repeat
	1		1
	2		2

[illegible]



Original	Replacement	Original	Replacement
On / Standby	Power	Volume+	Vol +
CBL/ SAT	Shift + 0	CH/ Page-	CH / Page-
DVD	Shift + 2	Sleep	Sleep / Timer
Tv Audio	Audi o / Lang I / II	Mute	Mute / Dimmer
Blu-ray	Shift + 1	Volume-	Vol -
AUX1	Shift + 7	Up	Up
M-XP	Fav / Marker / PC	Left	Left
Tuner	Shift + 6	Right	Right
Game	Shift + Fav / Marker / PC	Back	Back / Return
AUX2	Shift + 4	Down	Down
Phono	Shift + 9	Pause	Pause / Step / Freeze
i Pod/ USB	Shift + 8	Stop	Stop / Hold
Media Player	Shift + 5	Play	Play / Slow
CD	Shift + 3	I << / Tune-	Shift + << /
Net wor k	Gui de / EPG / - / - / -	I << / Tune-	Shift + I << / Preset-
I nt er net Radi o	Shift + Gui de / EPG / - / - / -	>> / Tune+	Shift + >> /
CH/ Page+	CH+ / Page+	>> / Tune+	Shift + >> / Preset+







Original	Replacement	Original	Replacement
ON / Standby	Power	Volume+	Vol +
CBL/ SAT	Shift + 0	CH/ Page-	CH / Page-
DVD	Shift + 2	Sleep	Sleep / Timer
Tv Audio	Audio / Lang I/II	Mute	Mute / Dimmer
Blu-ray	Shift + 1	Volume-	Vol -
AUX1	Shift + 7	Up	Up
M-XP	Fav / Marker / PC	Left	Left
Tuner	Shift + 6	Right	Right
Game	Shift + Fav / Marker / PC	Back	Back / Return
AUX2	Shift + 4	Down	Down
Phono	Shift + 9	Pause	Pause / Step / Freeze
i Pod/ USB	Shift + 8	Stop	Stop / Hold
Media Player	Shift + 5	Play	Play / Slow
CD	Shift + 3	I << / Tune-	Shift + << /
Net work	Gui de / EPG / - / - / -	I << / Tune-	Shift + I << / Preset-
I n t e r n e t R a d i o	Shift + Gui de / EPG / - / - / -	>> / Tune+	Shift + >> /
CH/ Page+	CH+ / Page+	>> / Tune+	Shift + >> / Preset+



