




Original	Replacement
Power Tv	 Power
Tv/VCR	 TV/Radio /
CH+	 CH+ / Page+
CH-	 CH- / Page-
Vol+	 Vol+
Vol-	 Vol-
Mute	 Mute / Dimmer
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
10	 0

Original	Replacement
 11/C/P	 Fav / Marker / PC
 12/-/-	 Guide / EPG / -/-
Power LD	 Smart / List
Eject LD	 Display / Media
Play LD	 Play / Slow
Pause LD	 Pause / Step / Freeze
Stop LD	 Stop / Hold
>>I LD	 >>I / Preset+
I<< LD	 I<< / Preset-
Power VCR	 Shift + Power
Tv/VCR VCR	 Shift + TV/Radio / Program
Preset CH+	 Shift + CH+ /
rset CH-	 Shift + CH- /
Rec VCR	 Rec / Rec Mode
Play VCR	 Shift + Play /
Pause VCR	 Shift + Pause / Step /
Stop VCR	 Shift + Stop / Hold

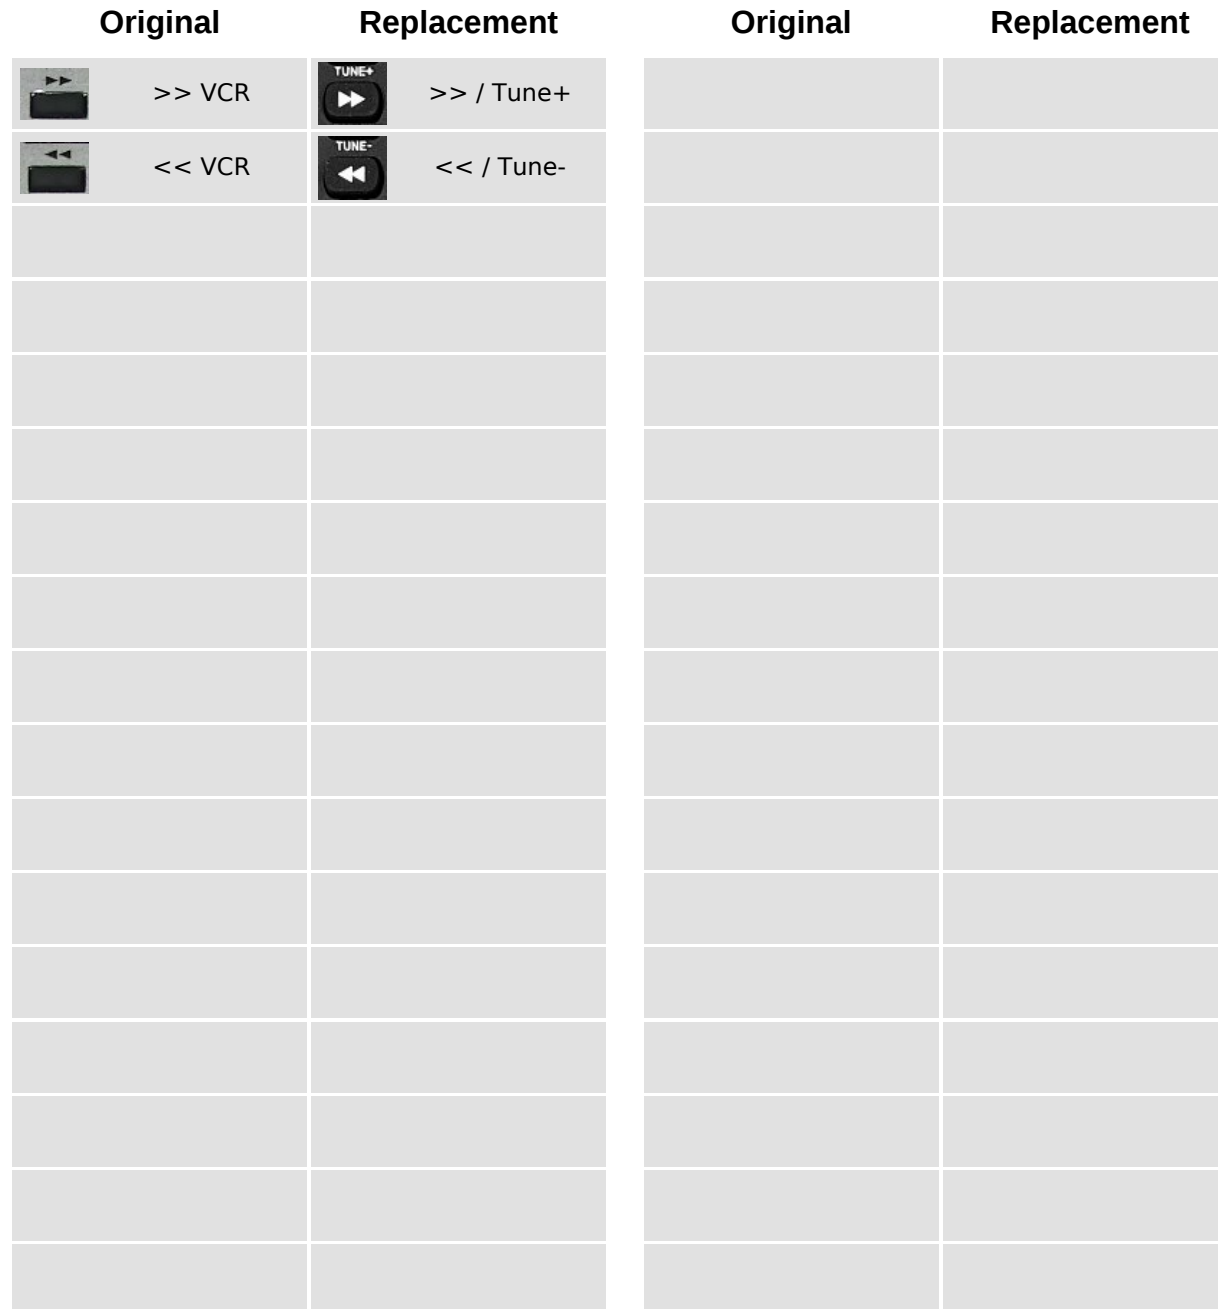





Original	Replacement	
Power		Power
Mute		Mute / Dimmer
Sleep		Sleep / Timer
Memo		Menu / Home
P.Set Up		CH+ / Page+
P.Set Down		CH- / Page-
CD		3
Phono		2
Tuner		6
DCC		4
Tape		5
D		Blue / Prime Video / Random
VCR 1		7
VCR 2		8
Delay		Setup / OPT /
C Mode		Audio / Lang I/II
S Mode		Sound / Title

Original	Replacement	
T-Tone		Text / Goto
Vol Main Up		Vol+
Vol Main Down		Vol-
Vol Centre Up		Up
Vol Center		Down
Vol Surr Up		Right
Vol Surr Down		Left
Play CD		Play / Slow
Pause CD		Pause / Step / Freeze
Stop CD		Stop / Hold
>>I CD		>>I / Preset+
I<< CD		I<< / Preset-
Play Tape		Red / Netflix / Search
Pause Tape		Green / APP / Repeat
Stop Tape		Yellow / YouTube / Repeat
Rec Tape		Rec / Rec Mode
>> Tape		>> / Tune+



